

AIR CONDITIONER

Wall mounted type

DESIGN & TECHNICAL MANUAL

INDOOR



ASYG30KMTA
ASYG36KMTA

OUTDOOR



AOYG30KMTA
AOYG36KMTA

FUJITSU GENERAL LIMITED

Notices:

- Product specifications and design are subject to change without notice for future improvement.
- For further details, please check with our authorized dealer.

Trademarks

The following term and logo are trademarks of Fujitsu General Limited in the United States, other countries or both:

FGLair™



Android and Google Play are trademarks of Google Inc.

App Store is a service mark of Apple Inc., registered in the U.S. and other countries.

IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

CONTENTS

Part 1. INDOOR UNIT	1
1. Specifications	2
2. Dimensions	4
2-1. Models: ASYG30KMTA and ASYG36KMTA	4
3. Wiring diagrams	6
3-1. Models: ASYG30KMTA and ASYG36KMTA	6
4. Capacity table	7
4-1. Cooling capacity	7
4-2. Heating capacity	8
5. Fan performance	9
5-1. Air velocity distributions	9
5-2. Airflow	10
6. Operation noise (sound pressure)	11
6-1. Noise level curve	11
6-2. Sound level check point	12
7. Safety devices	13
8. External input and output	14
8-1. External input	15
8-2. External output	16
8-3. Combination of external input and output	17
8-4. Details of function	18
9. Group connection	23
10. Remote controller	24
10-1. Wireless remote controller	24
11. Function settings	26
11-1. Function settings by using remote controller	26
11-2. Custom code setting for wireless remote controller	31
12. Accessories	32
13. Optional parts	33
13-1. Controllers	33
13-2. Others	34

CONTENTS (continued)

Part 2. OUTDOOR UNIT	35
1. Specifications	36
2. Dimensions	37
2-1. Models: AOYG30KMTA and AOYG36KMTA	37
3. Installation space	38
3-1. Models: AOYG30KMTA and AOYG36KMTA	38
4. Refrigerant circuit	41
4-1. Models: AOYG30KMTA and AOYG36KMTA	41
5. Wiring diagrams	42
5-1. Models: AOYG30KMTA and AOYG36KMTA	42
6. Capacity compensation rate for pipe length and height difference.....	43
6-1. Model: AOYG30KMTA	43
6-2. Model: AOYG36KMTA	44
7. Additional charge calculation	45
7-1. Models: AOYG30KMTA and AOYG36KMTA	45
8. Airflow	46
8-1. Models: AOYG30KMTA and AOYG36KMTA	46
9. Operation noise (sound pressure).....	47
9-1. Noise level curve.....	47
9-2. Sound level check point	48
10. Electrical characteristics	49
11. Safety devices	50
12. External input and output	51
12-1.External input	51
12-2.External output.....	53
13. Function settings	55
13-1.Control PCB and switch buttons location	55
13-2.Local setting procedure.....	57
14. Accessories	59
14-1.Models: AOYG30KMTA and AOYG36KMTA	59
15. Optional parts	60

Part 1. INDOOR UNIT

WALL MOUNTED TYPE:

ASYG30KMTA

ASYG36KMTA

1. Specifications

Type				Wall mounted		
				Inverter heat pump		
Model name				ASYG30KMTA	ASYG36KMTA	
Power supply				230 V ~ 50 Hz		
Power supply intake				Outdoor unit		
Available voltage range				198—264 V		
Capacity	Cooling	Rated	kW	8.0	9.4	
			Btu/h	27,300	32,100	
		Min.—Max.	kW	2.9—9.0	2.9—10.0	
			Btu/h	9,900—30,700	9,900—34,100	
	Heating	Rated	kW	8.8	10.1	
			Btu/h	30,000	34,500	
Min.—Max.		kW	2.2—11.0	2.7—11.2		
		Btu/h	7,500—37,500	9,200—38,200		
Input power	Cooling	Rated	kW	2.33	3.16	
		Min.—Max.		0.54—3.86	0.54—4.30	
	Heating	Rated		2.20	2.73	
		Min.—Max.		0.48—4.23	0.48—4.30	
	Fan	HIGH	W	62.0		
		MED		36.5		
		LOW		21.0		
		QUIET		11.5		
Current	Cooling	Rated	A	10.2	13.9	
	Heating			9.7	12.0	
EER	Cooling		kW/kW	3.43	2.97	
COP	Heating			4.00	3.70	
Sensible capacity	Cooling		kW	6.15	6.70	
Power factor	Cooling		%	99		
	Heating			99		
Moisture removal			L/h (pints/h)	2.6 (4.6)	3.8 (6.7)	
Maximum operating current*1		Cooling		A	21.0	21.5
		Heating			21.0	21.5
Fan	Airflow rate	Cooling	m³/h	1,330		
				1,100		
				920		
				720		
		Heating		1,330		
				1,100		
				920		
				720		
	Type × Q'ty			Sirocco fan × 1		
	Motor output			W		
Sound pressure level*2	Cooling	HIGH	dB (A)	61		
				MED	50	
				LOW	44	
				QUIET	40	
	Heating	HIGH		33		
				MED	49	
				LOW	44	
				QUIET	39	
Heat exchanger	Dimensions (H × W × D)		mm	Main: 448 × 900 × 30 Sub1: 84 × 900 × 13.3 Sub2: 126 × 900 × 13.3		
	Fin pitch			Main: 1.2, Sub: 1.4		
	Rows × Stages			Main: 3 × 28, Sub1: 1 × 4, Sub2: 1 × 6		
	Pipe type			Copper tube		
	Fin type			Aluminum		
Enclosure	Material			Polystyrene		
	Color			White Approximate color of Munsell N 9.25/		
Dimensions (H × W × D)	Net		mm	340 × 1,150 × 280		
	Gross			405 × 1,270 × 450		
Weight	Net		kg	18.5		
	Gross			24.5		
Connection pipe	Size	Liquid	mm (in)	Ø 9.52 (Ø 3/8)		
		Gas		Ø 15.88 (Ø 5/8)		
Method				Flare		
Drain hose	Material			PVC		
	Size		mm	Ø 13.8 (I.D.), Ø 15.8 to Ø 16.7 (O.D.)		
Operation range	Cooling			°C 18 to 32		
				%RH 80 or less		
		Heating	°C	16 to 30		
Remote controller				Wireless or Mobile app (FGLair*3) (Wired [option])		

NOTES:

- Specifications are based on the following conditions:
 - Cooling: Indoor temperature of 27 °CDB/19 °CWB, and outdoor temperature of 35 °CDB/24 °CWB.
 - Heating: Indoor temperature of 20 °CDB/15 °CWB, and outdoor temperature of 7 °CDB/6 °CWB.
 - Pipe length: 5.0 m, Height difference: 0 m. (Between outdoor unit and indoor unit.)
- Protective function might work when using it outside the operation range.
- *1: Maximum operating current is the total current of the indoor unit and the outdoor unit.
- *2: Sound pressure level:
 - Measured values in manufacturer's anechoic chamber.
 - Because of the surrounding sound environment, the sound levels measured in actual installation conditions might be higher than the specified values here.
- *3: Available on Google Play store or on App Store. For details, refer to the setting manual.
- This data is based on EN 14511 standard.

Specifications for ErP Lot 10					
Model name			ASYG30KMTA		ASYG36KMTA
Energy efficiency class	Cooling		A++		A++
	Heating (Average)		A+		A+
Pdesign	Cooling	kW	8.00		9.40
	Heating (Average)		6.50		7.10
SEER	Cooling	kWh/kWh	6.67		6.14
SCOP	Heating (Average)		4.54		4.52
Annual energy consumption	QCE	kWh/a	419		535
	QHE (Average)		2,001		2,198
Sound power level	Cooling	HIGH	dB (A)	65	
	Heating			65	



2-1. Models: ASYG30KMTA and ASYG36KMTA

2. Dimensions

■ Installation space requirement


Provide sufficient installation space for product safety.

Unit: mm

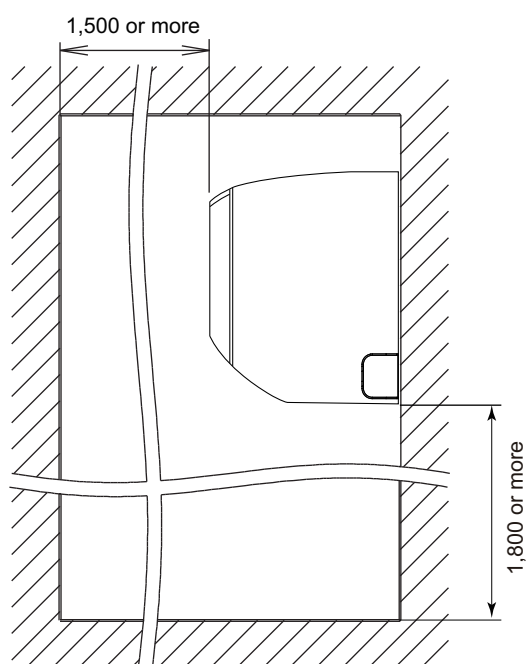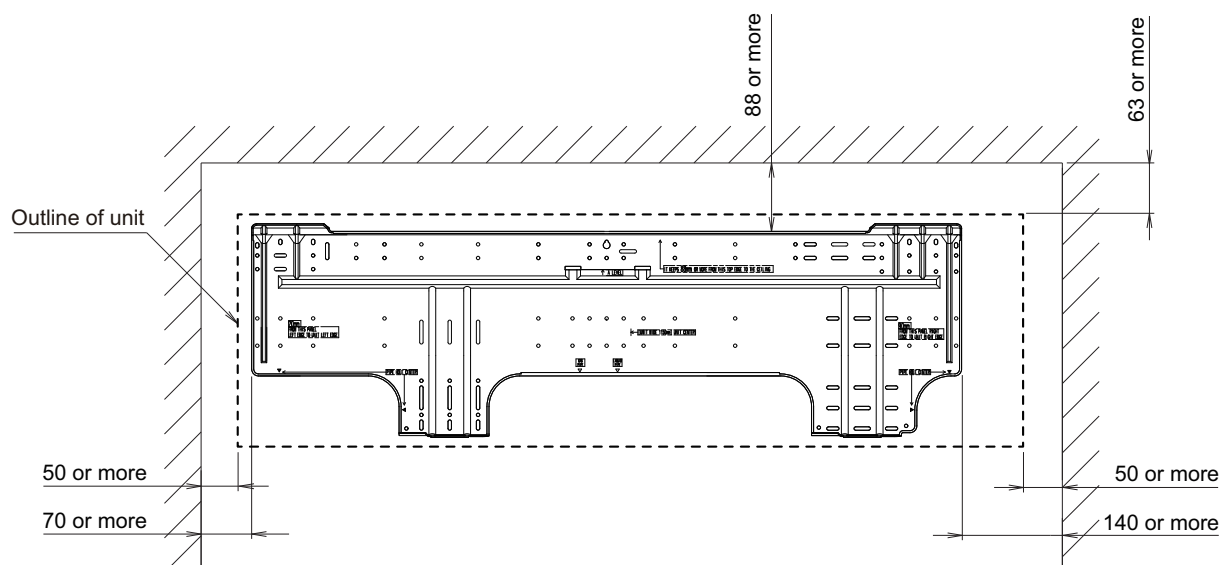

3. Wiring diagrams

3-1. Models: ASYG30KMTA and ASYG36KMTA

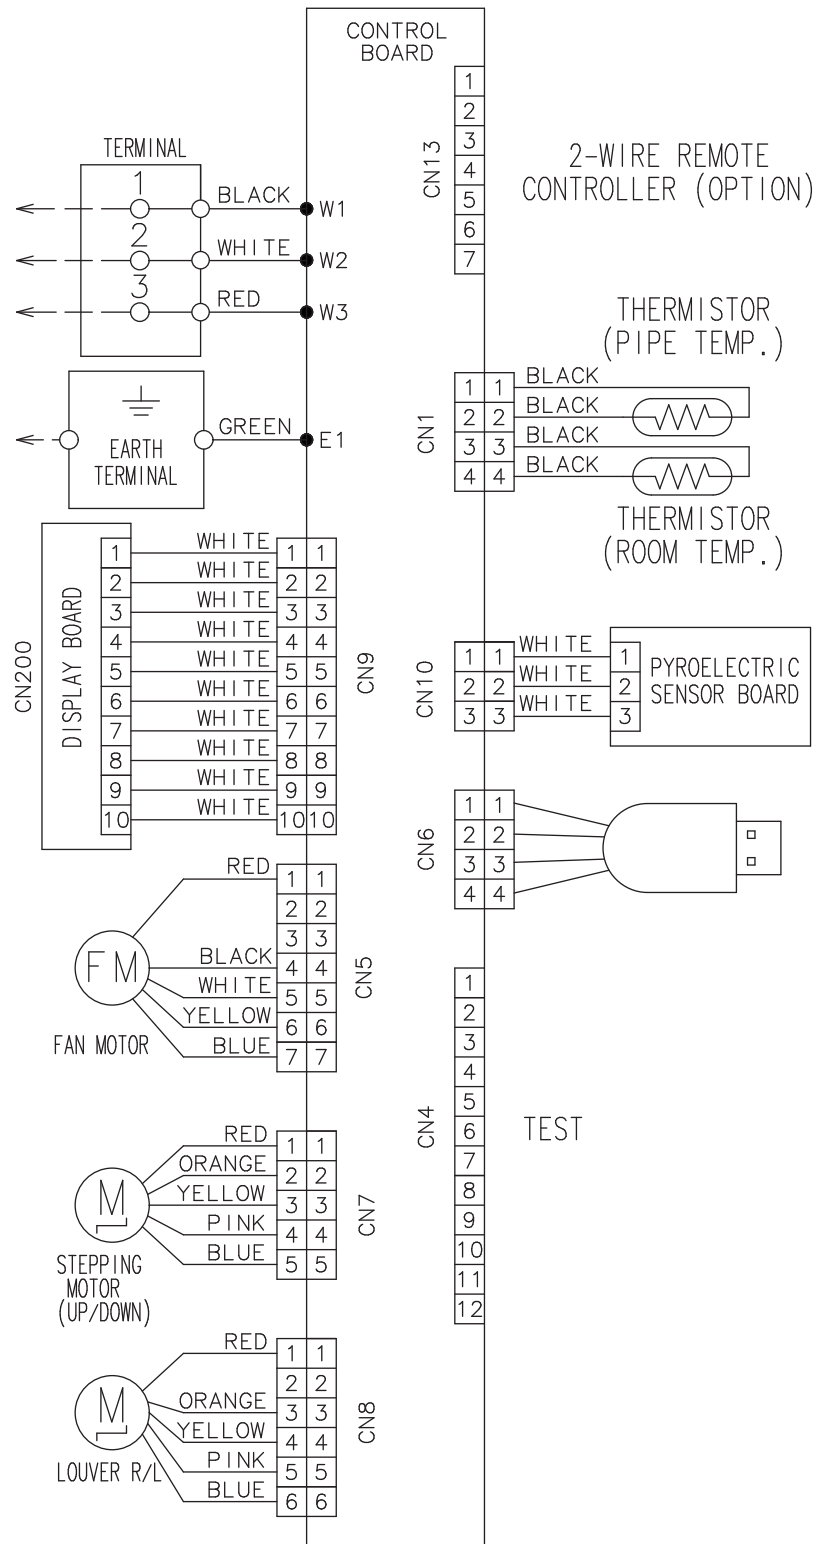

4. Capacity table

Capacity tables show each of following values calculated based on the outdoor temperature and the indoor temperature, under given Airflow Rate (AFR):

For cooling capacity: Total Capacity (TC), Sensible Heat Capacity (SHC), and Input Power (IP)

For heating capacity: Total Capacity (TC) and Input Power (IP)

4-1. Cooling capacity

■ Model: ASYG30KMTA

AFR		m³/h									1,330											
Outdoor temperature		Indoor temperature																				
	°CDB	18			21			23			25			27			29			32		
	°CWB	12			15			16			18			19			21			23		
	°CDB	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
		kW			kW			kW			kW			kW			kW			kW		
	-15	6.61	6.12	0.78	6.85	6.14	0.80	7.00	6.16	0.81	7.39	6.45	0.82	7.78	6.74	0.84	8.22	6.96	0.85	8.87	7.29	0.87
	-10	6.27	5.69	0.95	6.49	5.71	0.97	6.64	5.73	0.98	7.01	6.00	1.00	7.38	6.27	1.02	7.79	6.48	1.03	8.41	6.78	1.05
	0	5.59	4.84	1.28	5.78	4.86	1.31	5.91	4.87	1.33	6.24	5.10	1.35	6.57	5.33	1.38	6.94	5.51	1.40	7.49	5.76	1.43
	5	5.42	4.65	1.32	5.61	4.67	1.35	5.74	4.68	1.37	6.06	4.91	1.40	6.38	5.13	1.42	6.73	5.29	1.44	7.27	5.54	1.47
	10	5.25	4.47	1.36	5.44	4.48	1.39	5.56	4.50	1.41	5.87	4.71	1.44	6.18	4.92	1.46	6.53	5.08	1.48	7.05	5.32	1.51
	15	6.52	5.33	1.66	6.75	5.35	1.70	6.91	5.36	1.73	7.29	5.61	1.76	7.67	5.87	1.79	8.10	6.06	1.81	8.75	6.34	1.85
	20	7.79	6.19	1.97	8.07	6.21	2.01	8.25	6.22	2.04	8.71	6.52	2.08	9.17	6.81	2.11	9.68	7.04	2.15	10.45	7.37	2.19
25	7.46	5.99	2.03	7.72	6.01	2.08	7.90	6.02	2.11	8.34	6.31	2.15	8.78	6.59	2.19	9.27	6.81	2.22	10.01	7.13	2.27	
30	7.13	5.78	2.10	7.38	5.81	2.15	7.55	5.82	2.18	7.97	6.10	2.22	8.39	6.37	2.26	8.86	6.58	2.29	9.57	6.89	2.34	
35	6.80	5.58	2.17	7.04	5.60	2.22	7.20	5.62	2.25	7.60	5.88	2.29	8.00	6.15	2.33	8.45	6.35	2.36	9.12	6.65	2.41	
40	6.36	5.21	2.27	6.59	5.23	2.32	6.74	5.24	2.35	7.11	5.49	2.39	7.49	5.74	2.43	7.91	5.92	2.47	8.54	6.20	2.52	
46	5.84	4.76	2.38	6.04	4.78	2.44	6.18	4.79	2.48	6.52	5.02	2.52	6.87	5.24	2.56	7.25	5.41	2.60	7.83	5.67	2.65	

■ Model: ASYG36KMTA

AFR		m³/h										1,330										
Outdoor temperature		Indoor temperature																				
	°CDB	18			21			23			25			27			29			32		
	°CWB	12			15			16			18			19			21			23		
	°CDB	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
		kW			kW			kW			kW			kW			kW			kW		
	-15	7.77	6.96	1.06	8.05	6.98	1.08	8.23	7.00	1.10	8.69	7.33	1.12	9.14	7.50	1.14	9.66	7.91	1.15	10.43	8.28	1.18
	-10	7.37	6.47	1.28	7.63	6.50	1.31	7.80	6.51	1.33	8.24	6.82	1.36	8.67	6.98	1.38	9.16	7.36	1.40	9.89	7.71	1.43
	0	6.56	5.51	1.74	6.79	5.53	1.78	6.95	5.54	1.81	7.34	5.81	1.84	7.72	5.94	1.87	8.16	6.27	1.89	8.81	6.56	1.93
	5	6.37	5.30	1.79	6.59	5.32	1.83	6.74	5.33	1.86	7.12	5.58	1.89	7.49	5.71	1.92	7.91	6.03	1.95	8.54	6.31	1.99
	10	6.17	5.09	1.84	6.39	5.11	1.89	6.54	5.12	1.92	6.90	5.36	1.95	7.26	5.49	1.98	7.67	5.79	2.01	8.28	6.06	2.05
	15	7.66	6.18	2.26	7.93	6.20	2.31	8.11	6.21	2.34	8.57	6.51	2.38	9.02	6.66	2.42	9.52	7.03	2.46	10.28	7.35	2.51
	20	9.15	7.26	2.67	9.48	7.29	2.73	9.69	7.31	2.77	10.23	7.66	2.82	10.77	7.83	2.87	11.38	8.26	2.91	12.28	8.65	2.97
	25	8.77	6.96	2.76	9.07	6.99	2.82	9.28	7.00	2.87	9.80	7.34	2.92	10.31	7.50	2.97	10.89	7.92	3.01	11.76	8.29	3.07
	30	8.38	6.66	2.85	8.67	6.68	2.92	8.87	6.70	2.96	9.36	7.02	3.01	9.86	7.18	3.06	10.41	7.57	3.11	11.24	7.93	3.17
	35	7.99	6.21	2.94	8.27	6.24	3.01	8.46	6.25	3.06	8.93	6.55	3.11	9.40	6.70	3.16	9.93	7.07	3.21	10.72	7.40	3.27
	40	7.47	6.32	3.07	7.74	6.34	3.15	7.92	6.36	3.19	8.36	6.66	3.25	8.80	6.81	3.30	9.29	7.19	3.35	10.03	7.53	3.42
46	6.86	6.28	3.23	7.10	6.30	3.31	7.26	6.32	3.36	7.67	6.62	3.42	8.07	6.77	3.47	8.52	7.14	3.52	9.20	7.48	3.60	

4-2. Heating capacity

NOTE: Values mentioned in the table are calculated based on the maximum capacity.

■ Model: ASYG30KMTA

AFR	m ³ /h	1,330
-----	-------------------	-------

			Indoor temperature									
			16		18		20		22		27	
			TC	IP	TC	IP	TC	IP	TC	IP	TC	IP
			kW		kW		kW		kW		kW	
Outdoor temperature	°CDB	°CWB	6.70	2.69	6.67	2.70	6.62	2.70	6.47	2.70	6.04	2.71
	-15	-16	7.67	2.91	7.63	2.92	7.58	2.92	7.40	2.92	6.92	2.93
	-10	-11	8.63	3.13	8.60	3.13	8.53	3.14	8.34	3.14	7.79	3.15
	-5	-7	9.60	3.35	9.56	3.35	9.49	3.36	9.27	3.36	8.66	3.37
	0	-2	10.72	3.40	10.67	3.40	10.59	3.41	10.35	3.41	9.67	3.42
	5	3	11.13	3.42	11.08	3.42	11.00	3.43	10.75	3.43	10.04	3.44
	7	6	11.51	3.41	11.46	3.42	11.37	3.42	11.11	3.43	10.38	3.44
	10	8	11.97	3.41	11.92	3.42	11.83	3.42	11.56	3.43	10.80	3.44
	15	10	12.75	3.43	12.69	3.43	12.60	3.43	12.31	3.44	11.50	3.45
	20	15	13.37	3.44	13.31	3.44	13.21	3.44	12.91	3.45	12.06	3.46
	24	18										

■ Model: ASYG36KMTA

AFR	m ³ /h	1,330
-----	-------------------	-------

			Indoor temperature									
			16		18		20		22		27	
			TC	IP	TC	IP	TC	IP	TC	IP	TC	IP
			kW		kW		kW		kW		kW	
Outdoor temperature	°CDB	°CWB	6.82	2.75	6.80	2.75	6.74	2.75	6.59	2.76	6.16	2.77
	-15	-16	7.81	2.97	7.78	2.97	7.72	2.98	7.54	2.98	7.04	2.99
	-10	-11	8.79	3.19	8.76	3.20	8.69	3.20	8.49	3.20	7.93	3.21
	-5	-7	9.78	3.41	9.74	3.42	9.66	3.42	9.44	3.43	8.82	3.44
	0	-2	10.92	3.47	10.87	3.47	10.79	3.48	10.54	3.48	9.85	3.49
	5	3	11.33	3.49	11.29	3.49	11.20	3.50	10.95	3.50	10.22	3.51
	7	6	11.72	3.48	11.67	3.48	11.58	3.49	11.32	3.49	10.57	3.50
	10	8	12.19	3.48	12.14	3.48	12.05	3.49	11.78	3.49	11.00	3.50
	15	10	12.98	3.49	12.93	3.50	12.83	3.50	12.54	3.51	11.71	3.52
	20	15	13.62	3.50	13.56	3.51	13.46	3.51	13.15	3.52	12.28	3.53
	24	18										


5. Fan performance

5-1. Air velocity distributions


■ Models: ASYG30KMTA and ASYG36KMTA

Measuring conditions	Fan speed	Operation mode
	HIGH	FAN


Top view
Vertical airflow direction louver: Up
Horizontal airflow direction louver: Center

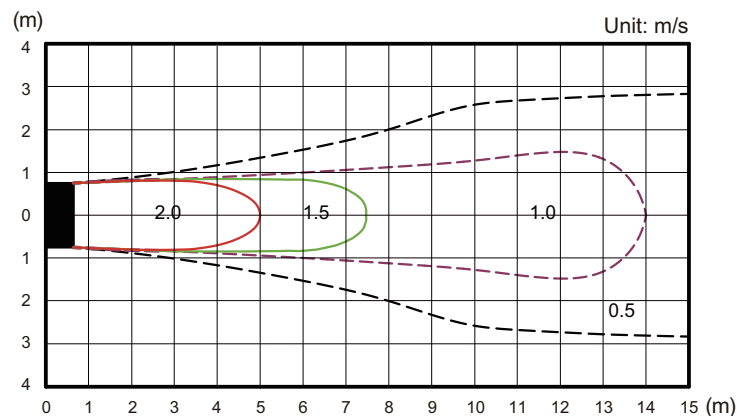


Top view
Vertical airflow direction louver: Up
Horizontal airflow direction louver: Left & Right

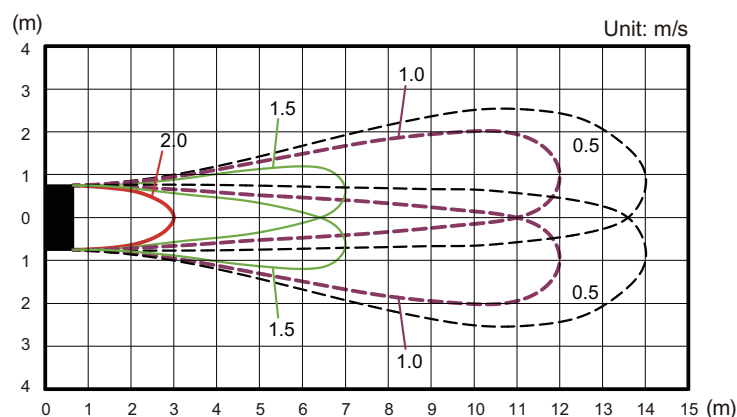

Side view
Vertical airflow direction louver: Up
Horizontal airflow direction louver: Center

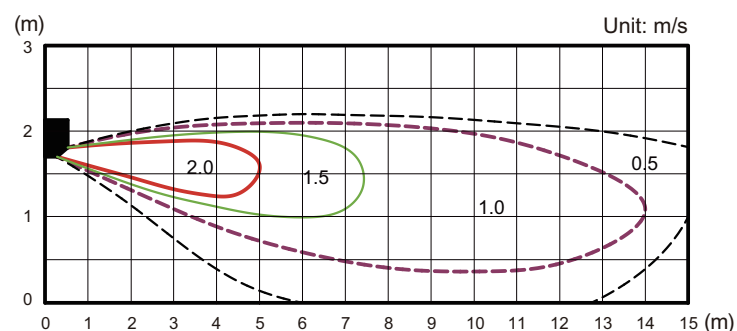

Side view
Vertical airflow direction louver: Down
Horizontal airflow direction louver: Center

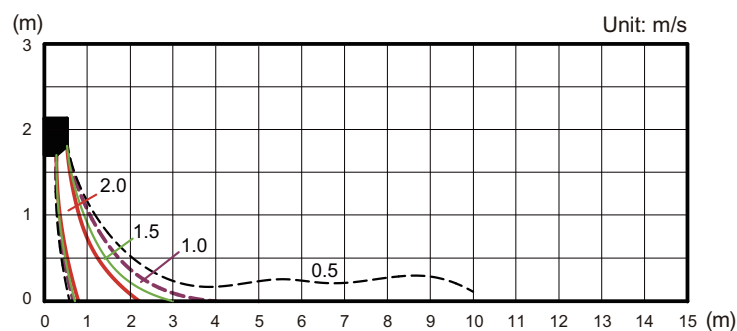

5-2. Airflow

■ Models: ASYG30KMTA and ASYG36KMTA

● Cooling

Fan speed	Airflow	
HIGH	m ³ /h	1,330
	l/s	369
	CFM	783
MED	m ³ /h	1,100
	l/s	306
	CFM	647
LOW	m ³ /h	920
	l/s	256
	CFM	542
QUIET	m ³ /h	720
	l/s	200
	CFM	424

● Heating


Fan speed	Airflow	
HIGH	m ³ /h	1,330
	l/s	369
	CFM	783
MED	m ³ /h	1,100
	l/s	306
	CFM	647
LOW	m ³ /h	920
	l/s	256
	CFM	542
QUIET	m ³ /h	720
	l/s	200
	CFM	424

6. Operation noise (sound pressure)


6-1. Noise level curve

■ Model: ASYG30KMTA

● Cooling

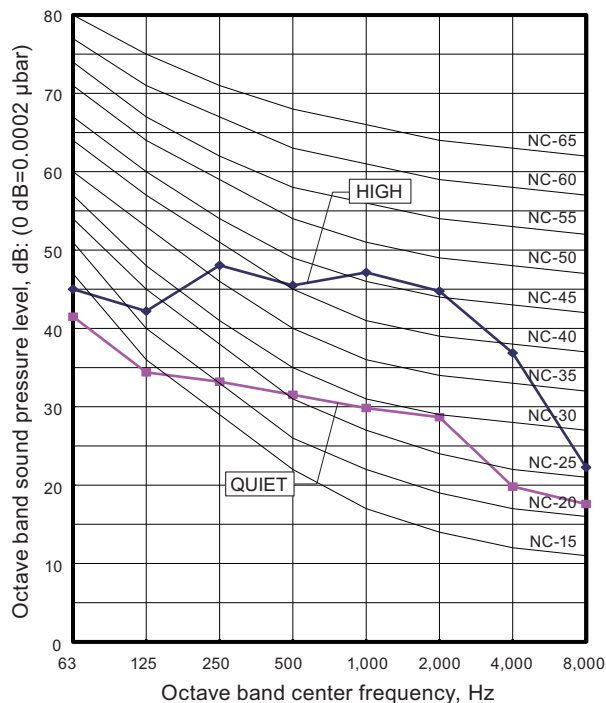


● Heating

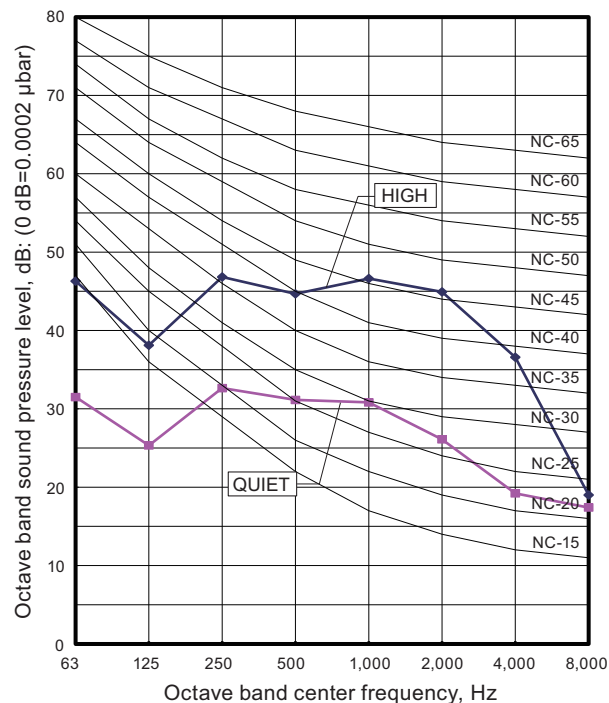


■ Model: ASYG36KMTA


● Cooling

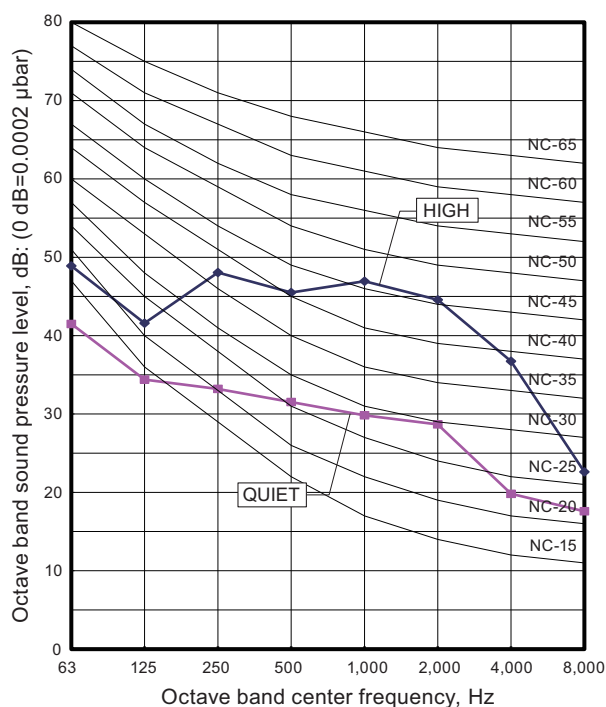

● Heating

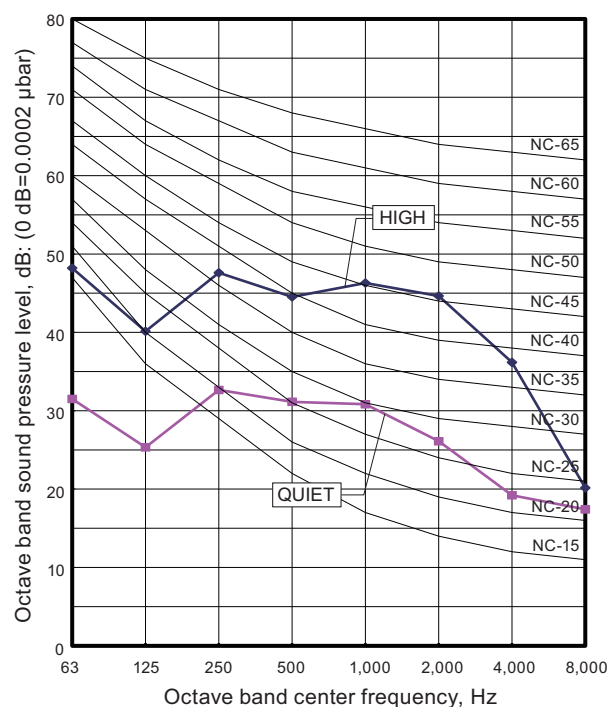

6-2. Sound level check point

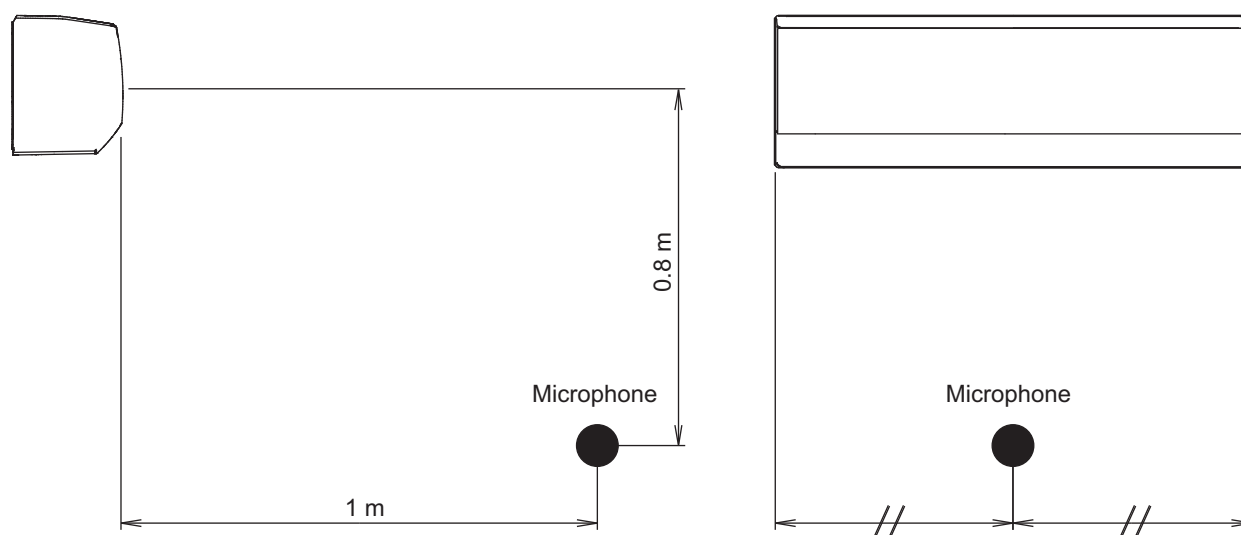


NOTE: Detailed shape of the actual indoor unit might be slightly different from the one illustrated above.

7. Safety devices

Type of protection	Protection form		Model
			ASYG30KMTA, ASYG36KMTA
Circuit protection	Current fuse (PCB*)		250 V, 3.15 A
Fan motor protection	Thermistor protection	Activate	125±25 °C Fan motor stop
		Reset	100 ⁺²⁵ ₋₂₀ °C Fan motor restart
	Power IC thermal shutdown protection	Activate	150±15 °C Fan motor stop
		Reset	Less than 135 °C Fan motor restart

*PCB: Printed Circuit Board

8. External input and output

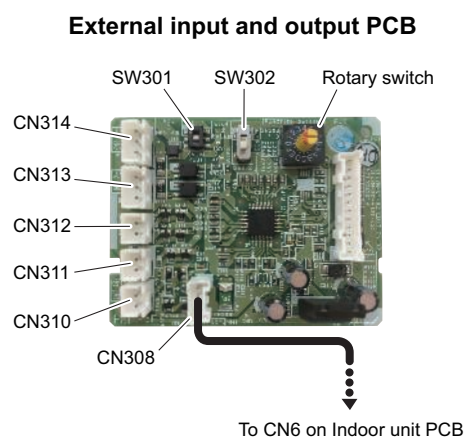

PCB	External input	External output	Connector	Input select	Input signal
External input and output (UTY-XCSXZ2)	Operation/Stop	—	CN313/ CN314	Dry contact/ Apply voltage	Edge/Pulse
	Forced stop		CN313		Edge
	Forced thermostat off				
	—	Operation status	CN310	—	—
		Error status	CN311		
		Indoor unit fan operation status	CN312		

NOTE: External input and output PCB cannot be used with Wireless LAN adapter simultaneously.

8-1. External input

With using external input function, some functions on this product can be controlled from an external device.

- "Operation/Stop" mode or "Forced stop" mode can be selected with function setting of indoor unit.
- A twisted pair cable should be used. Maximum length of cable is 150 m.
- The wire connection should be separate from the power cable line.

External input and output PCB


The indoor unit Operation/Stop can be set by using the input connector on the PCB.

Input select:

Use either one of these types of connectors according to the application. (Both types of connectors cannot be used simultaneously.)

– Dry contact


In case of internal power supply, set the slide switch of SW301 to "NON VOL" side.

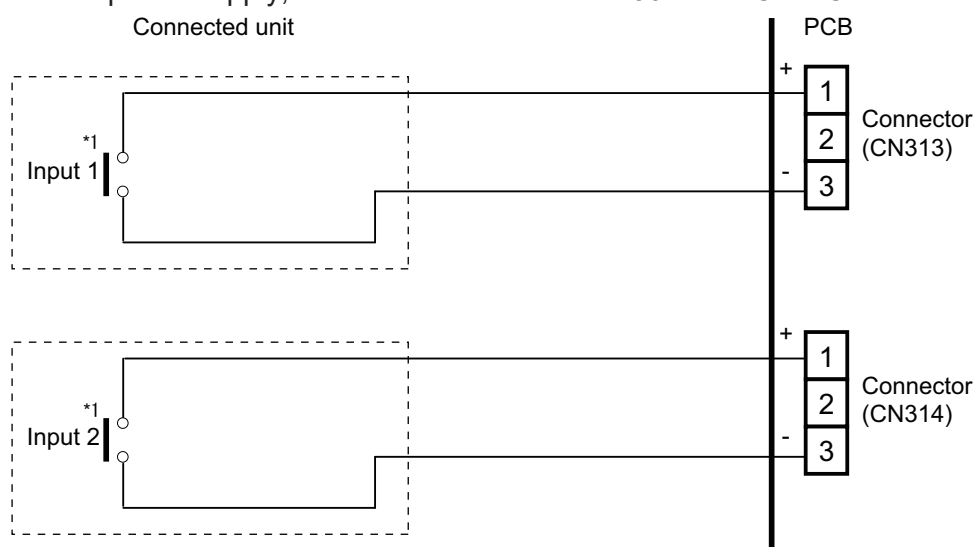

*1: The switches can be used on the following condition: DC 12 V to 24 V, 1 mA to 15 mA.

– Apply voltage

In case of external power supply, set the slide switch of SW301 to "VOL" side.

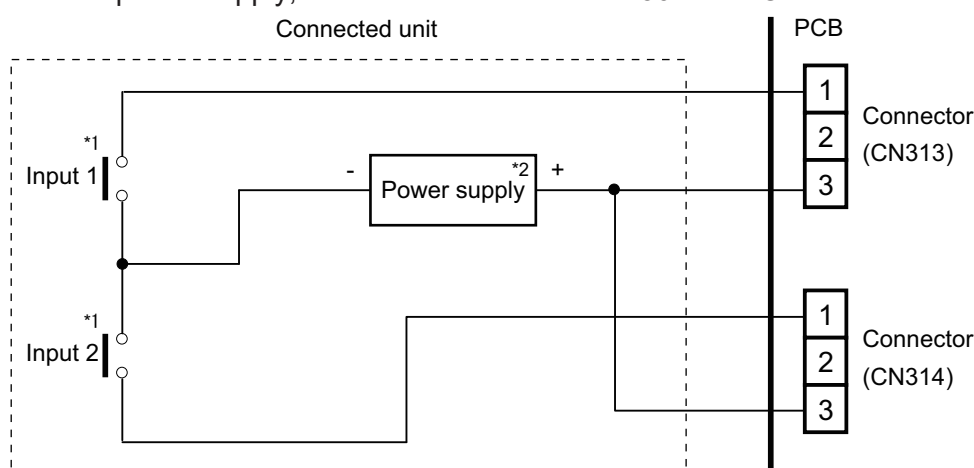

*1: The switches can be used on the following condition: DC 12 V to 24 V, 1 mA to 15 mA.

*2: Make the power supply DC 12 to 24 V, 10 mA or more.

8-2. External output


Use an external output cable with appropriate external dimension, depending on the number of cables to be installed.

External input and output PCB

- A twisted pair cable (22AWG) should be used. Maximum length of cable is 25 m.
- Output voltage: High DC 12 V $\pm$ 2 V, Low 0 V.
- Permissible current: 50 mA
- For details, refer to ["Combination of external input and output"](#) on page 17.


- **When indicator or other components are connected directly:**

Example: Rotary SW on External input and output PCB is set to "1".

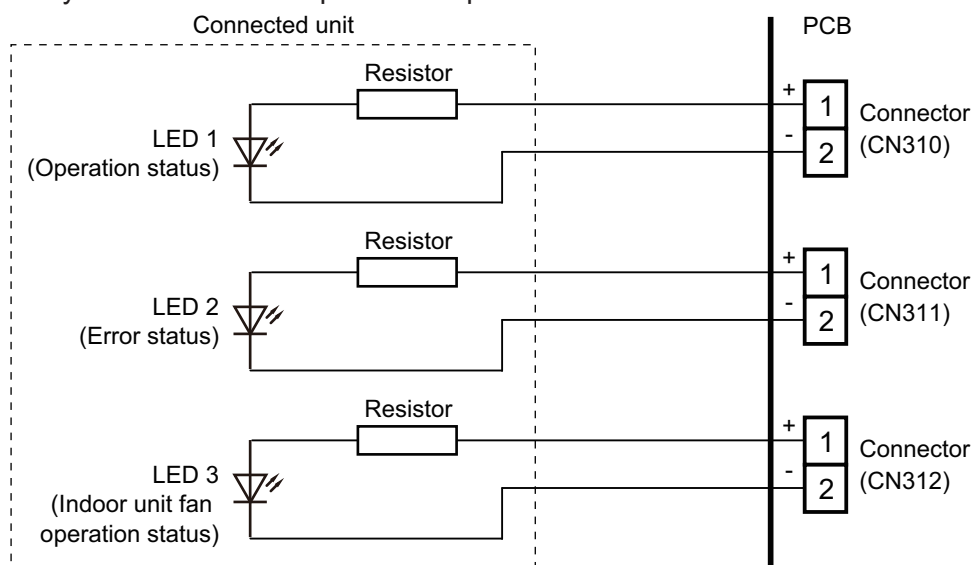

- **When connecting with a device equipped with a power supply:**

Example: Rotary SW on External input and output PCB is set to "1".

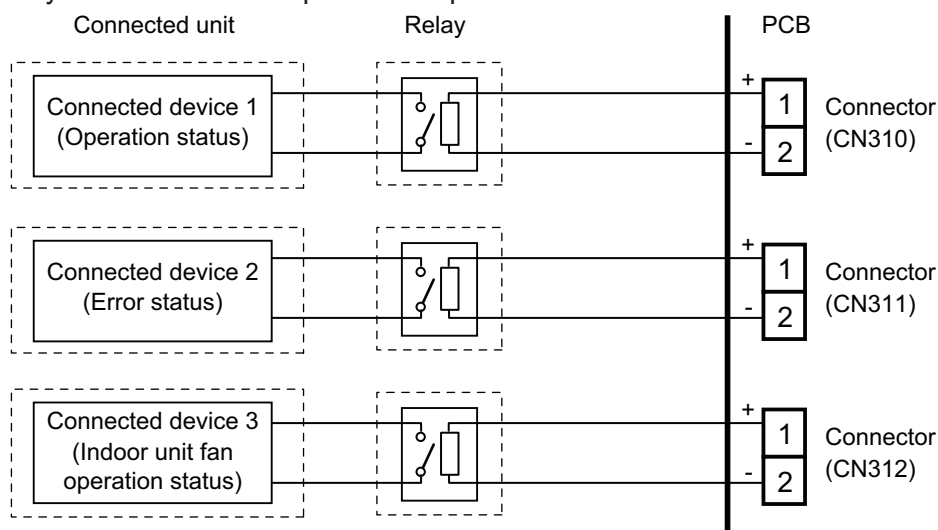

8-3. Combination of external input and output

By combining the function setting of the indoor unit and rotary switch setting of the External input and output PCB, you can select various combinations of functions.

Combination examples of external input and output are as follows:

Mode	External input and output PCB (Rotary SW)	External input		
		External input and output PCB		
		CN313	CN314	Signal type
0-1	1	Operation/Stop	Not available	Edge
		Operation	Stop	Pulse
0-2	2	Forced Thermostat OFF	Not available	Edge
1—8	3 - 9, A	(Setting prohibited)		
9	B	Forced Thermostat OFF	Not available	Edge
10	C	Forced Thermostat OFF	Not available	Edge
11	D	Forced Thermostat OFF	Not available	Edge

Mode	External input and output PCB (Rotary SW)	External output		
		External input and output PCB		
		CN310	CN311	CN312
0-1	1	Operation/Stop	Error status	Indoor unit fan operation status
0-2	2	Error status	Indoor unit fan operation status	Not available
1—8	3 - 9, A	(Setting prohibited)		
9	B	Operation/Stop	Indoor unit fan operation status	Not available
10	C	Operation/Stop	Error status	Not available
11	D	Operation/Stop	Indoor unit fan operation status	Error status

NOTE: Input of Operation/Stop depends on the setting of function setting 46.

00: Operation/Stop mode 1 (R.C. enabled)

01: (Setting prohibited)

02: Forced stop


03: Operation/Stop mode 2 (R.C. disabled)

Input signal type

External input and output PCB:

The input signal type can be selected.

Signal type (edge or pulse) can be switched by the DIP switch SW302 on the External input and output PCB.

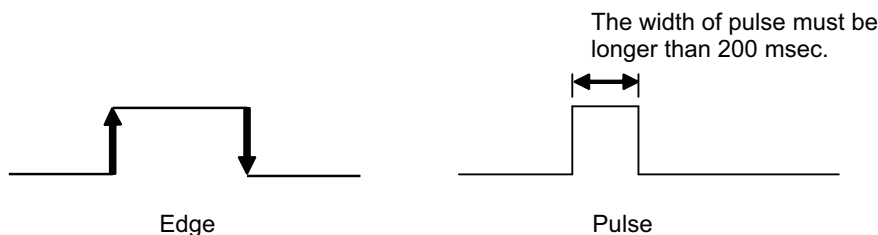


8-4. Details of function

■ Control input function


- When function setting is “Operation/Stop” mode 1
 - In the case of “Edge” input:

Function setting	Rotary SW on External input and output PCB	External input		Input signal	Command
46-00	1	External input and output PCB	CN313	Off → On	Operation
				On → Off	Stop

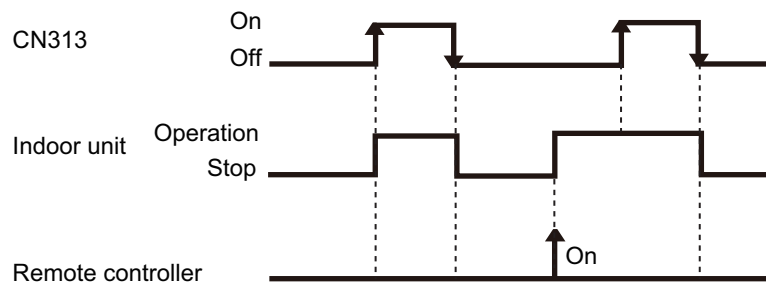

- In the case of “Pulse” input:

Function setting	Rotary SW on External input and output PCB	External input		Input signal	Command
46-00	1	External input and output PCB	CN313	Pulse	Operation
			CN314	Pulse	Stop

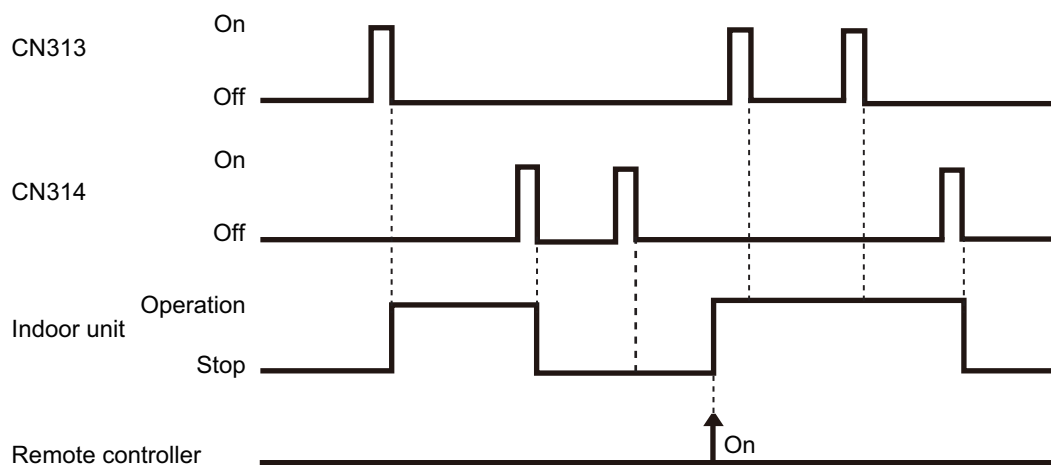


NOTES:

- The last command has priority.
- The indoor units within the same remote controller group operates in the same mode.

- When function setting is “Forced stop” mode


- In the case of “Edge” input:

Function setting	Rotary SW on External input and output PCB	External input		Input signal	Command
46-02	1	External input and output PCB	CN313	Off → On	Forced stop
				On → Off	Normal

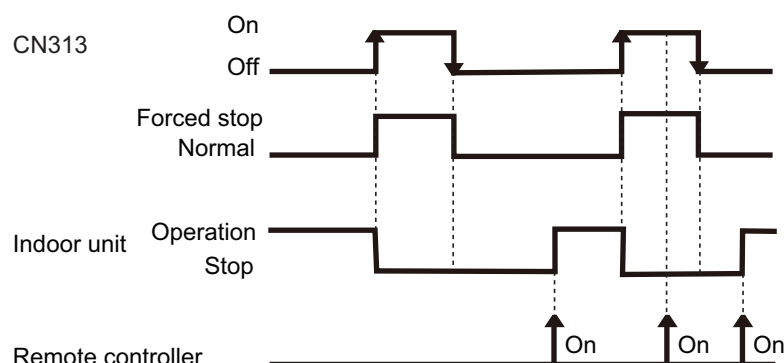

- In the case of “Pulse” input:

Function setting	Rotary SW on External input and output PCB	External input		Input signal	Command
46-02	1	External input and output PCB	CN313	Pulse	Forced stop
			CN314	Pulse	Normal

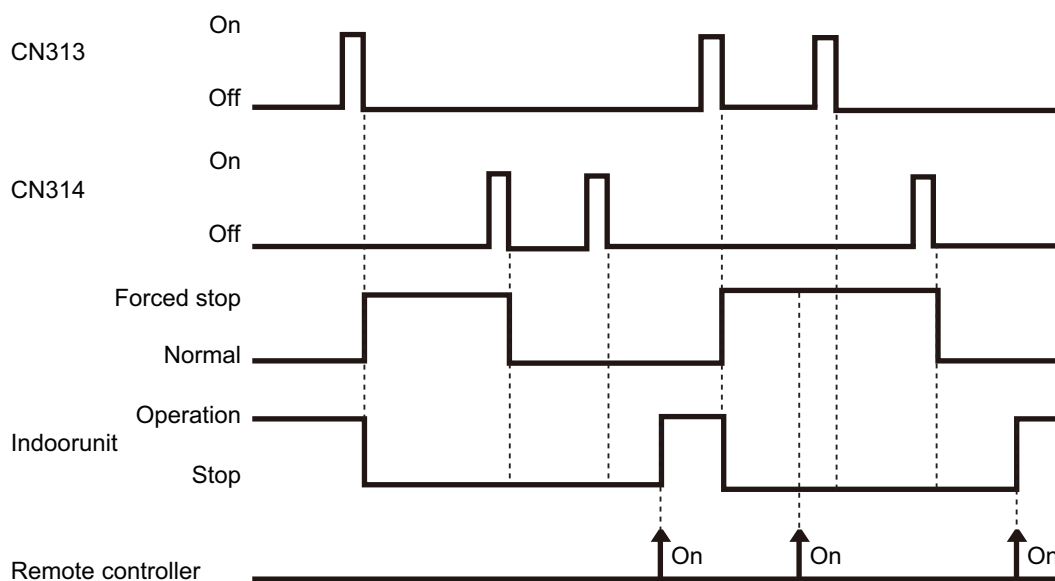


NOTES:

- When the forced stop is triggered, indoor unit stops and Operation/Stop operation by the remote controller is restricted.
- When forced stop function is used with forming a remote controller group, connect the same equipment to each indoor unit within the group.

• When function setting is “Operation/Stop” mode 2


– In the case of “Edge” input:

Function setting	Rotary SW on External input and output PCB	External input		Input signal	Command
46-03	1	External input and output PCB	CN313	Off → On	Operation
				On → Off	Stop (R.C. disabled)

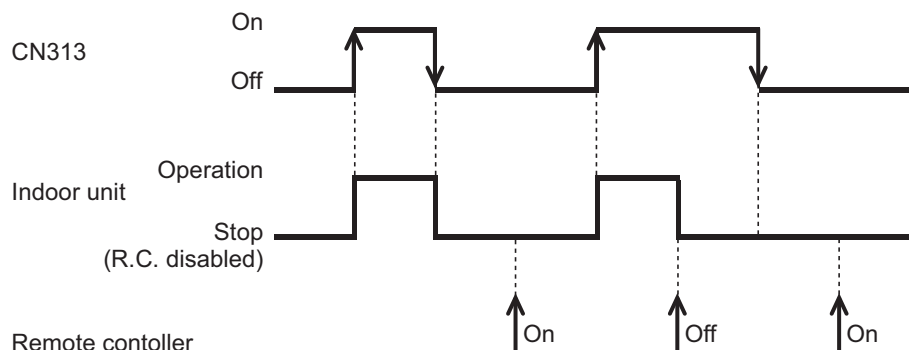

– In the case of “Pulse” input:


Function setting	Rotary SW on External input and output PCB	External input		Input signal	Command
46-03	1	External input and output PCB	CN313	Pulse	Operation
			CN314	Pulse	Stop (R.C. disabled)

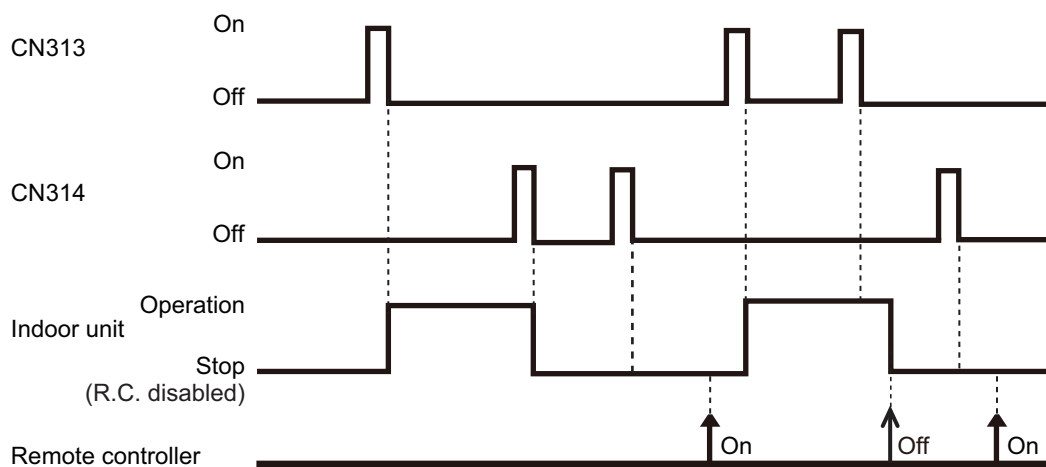

NOTE: When “Operation/Stop” mode 2 function is used with forming a remote controller group, connect the same equipment to each indoor unit within the group.

- Forced thermostat off function

Rotary SW on External input and output PCB	External input		Input signal	Command
2 B C	External input and output PCB	CN313	Off → On	Thermostat off
			On → Off	Normal operation

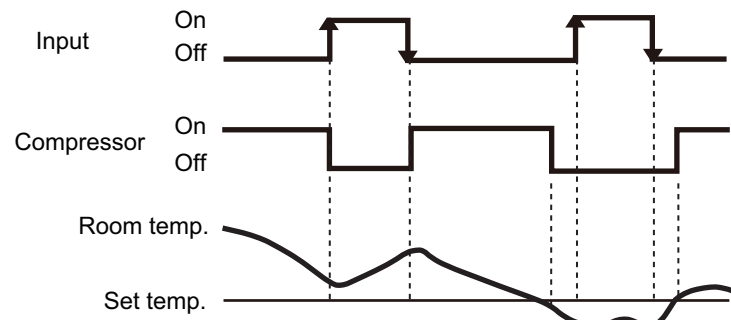


Control output function

• Operation/Stop status

Rotary SW on External input and output PCB	External output		Output signal	Command
1	External input and output PCB	CN310	Off → On	Operation
B			On → Off	Stop
C				
D				


The output is low when the unit is stopped.

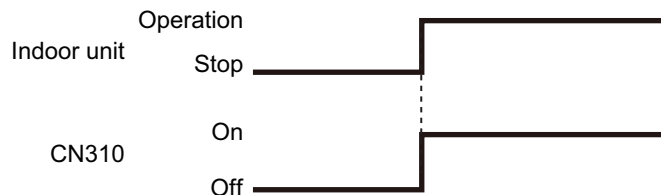

• Error status

Rotary SW on External input and output PCB	External output		Output signal	Command
1	External input and output PCB	CN311	Off → On	Error
C			On → Off	Normal
D		CN312	Off → On	Error
			On → Off	Normal


The output is ON when an error is generated for the indoor unit.

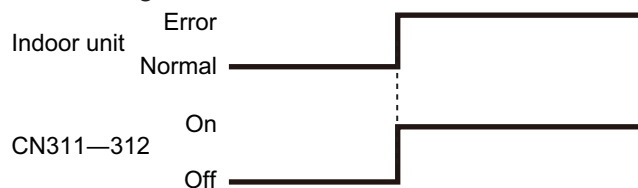

• Indoor unit fan operation status

Rotary SW on External input and output PCB	External output		Output signal	Command
1	External input and output PCB	CN312	Off → On	Fan run
			On → Off	Fan stop
2		CN311	Off → On	Fan run
B			On → Off	Fan stop
D				

Output signal	Condition
On Low → High	The indoor unit fan is operating.
Off High → Low	The fan is stopped or during cold air prevention. During thermostat off when in dry mode operation.

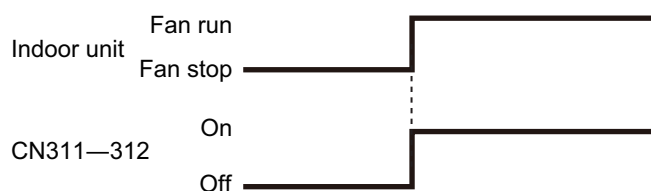

9. Group connection


NOTE: Group control cannot be used together with Wireless LAN adapter.

Installation procedure for group control system:

A number of indoor units can be operated at the same time using a single remote controller.


NOTE: When different type of indoor units (such as wall mounted type and cassette type, cassette type and duct type, or other combinations) are connected using group control system, some functions may no longer be available.

1. Connect up to 16 indoor units in a system.

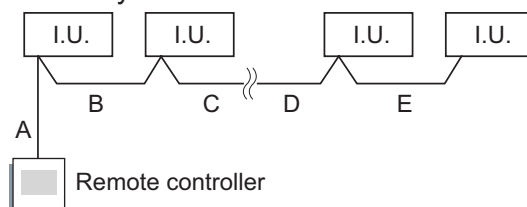

A, B, C, D, E: Remote controller cable	
Wiring length limitation	$A + B + C + D + E \leq 500 \text{ m}$

Example of wiring method

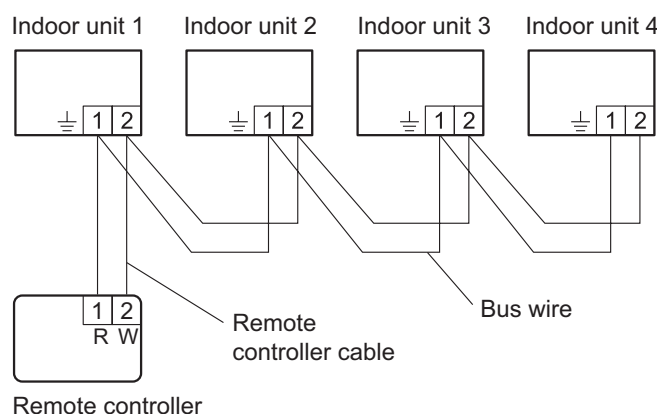

2. Set the R.C. address. (Function setting)

- Addresses will be automatically set when initially starting up this unit. In such a case, do not change the remote controller address for the indoor unit, and keep it at the initial setting of "00".
- Only set addresses manually when using different numbers for addresses. Set the R.C. address of each indoor unit using the function setting. (Refer to "Remote controller address setting" in ["Contents of function setting"](#) on page 27.)


NOTES:

- Do not use the same setting value.
- Setting is reflected after the power is turned on again.

Also set the R.C. address for the remote controller. For details, refer to the remote controller installation manual.

NOTE: In manual setting, connect up to 15 indoor units in a system.


Example of wiring method

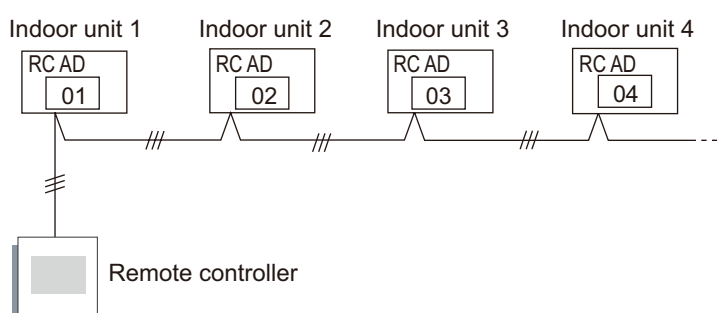

10. Remote controller


10-1. Wireless remote controller

Overview

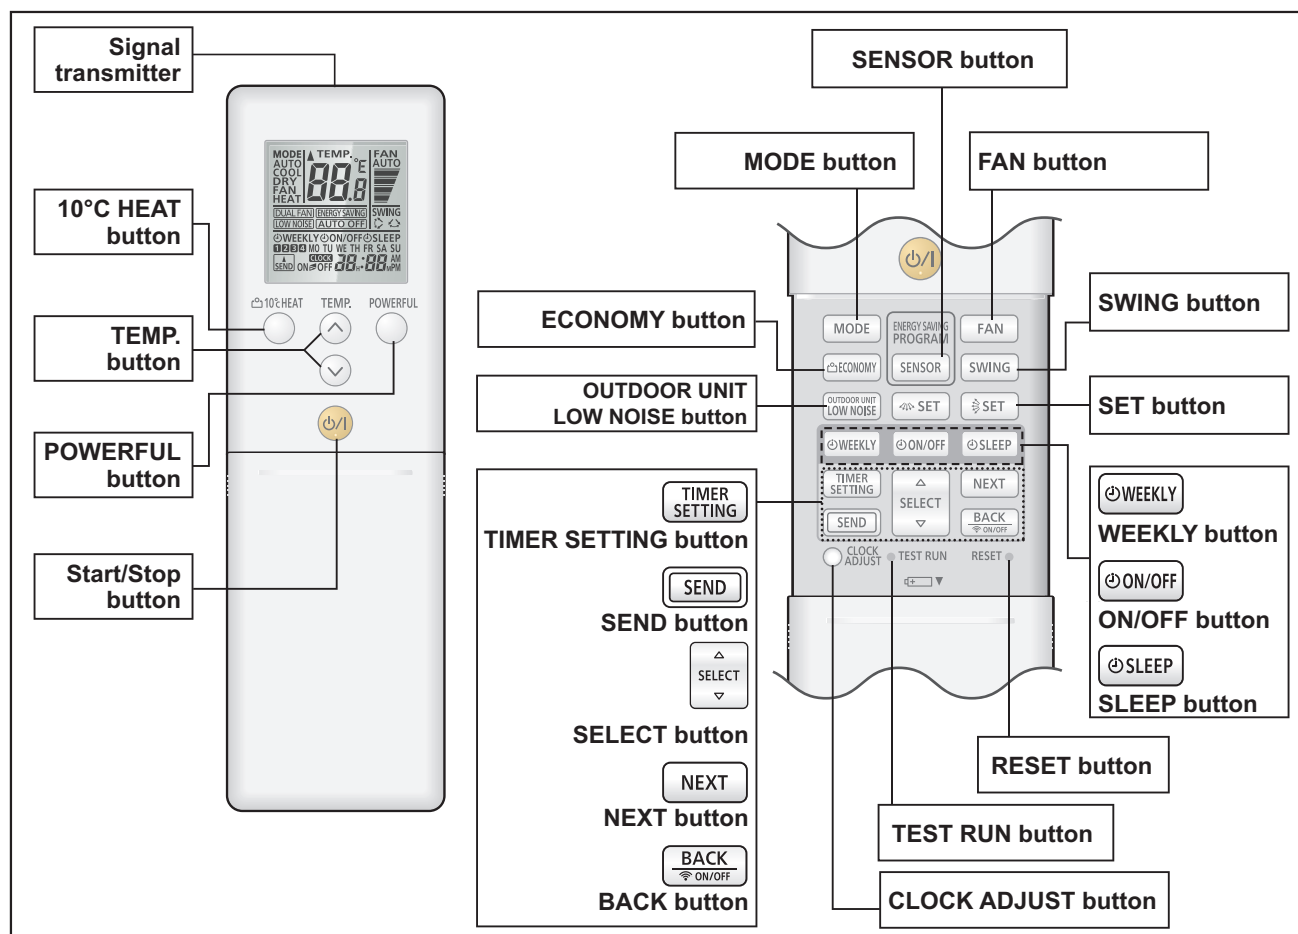

NOTE: Functions may differ by type of the indoor unit. For details, refer to the operation manual.

Display panel

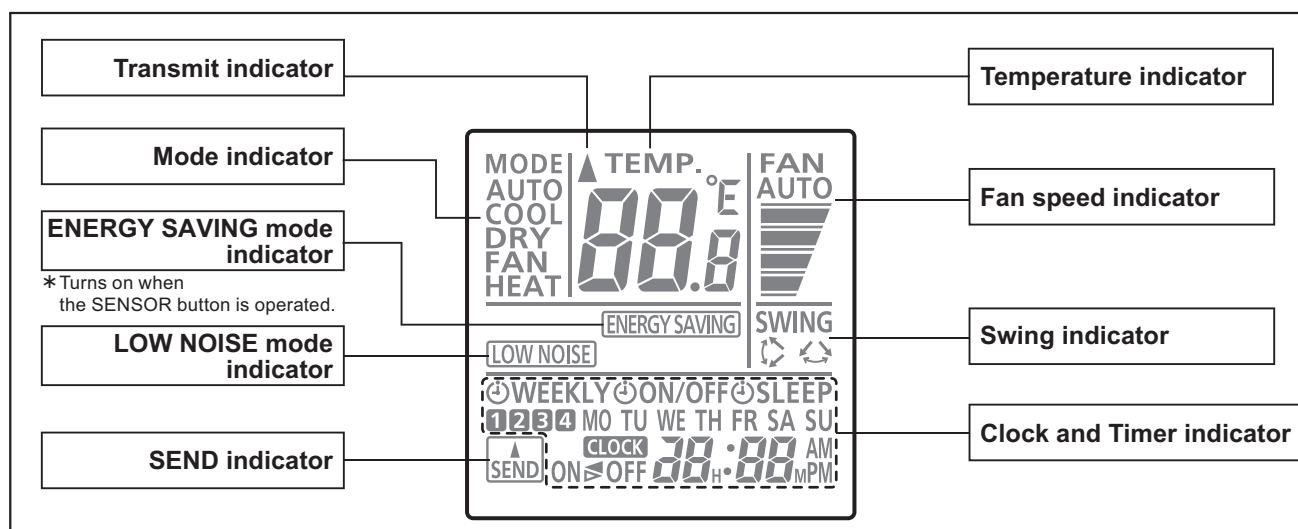


To facilitate explanation, the accompanying illustration has been drawn to show all possible indicators; in actual operation, however, the display will only show those indicators appropriate to the current operation.

■ Specifications

● Controller


Unit: mm

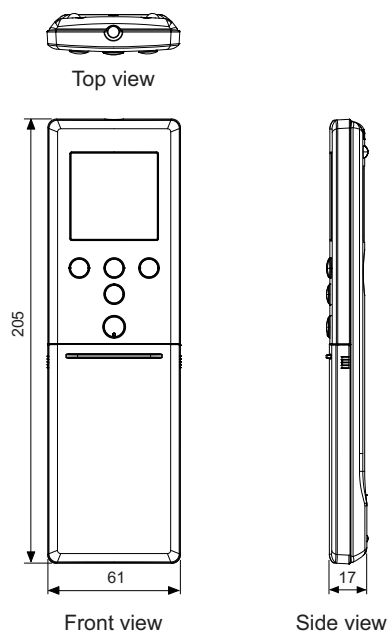

Size (H × W × D)	mm	205 × 61 × 17
Weight	g	124 (without batteries)

● Holder

Unit: mm

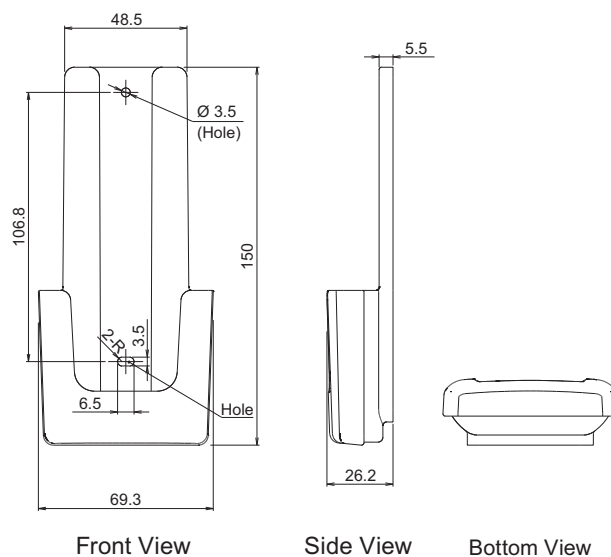

Size (H × W × D)	mm	150 × 69.3 × 26.2
Weight	g	27

11. Function settings

To adjust the functions of this product according to the installation environment, various types of function settings are available.

NOTE: Incorrect settings can cause a product malfunction.

11-1. Function settings by using remote controller

Some function settings can be changed on the remote controller. After confirming the setting procedure and the content of each function setting, select appropriate functions for your installation environment.

■ Setting procedure by using wireless remote controller

The function number and the associated setting value are displayed on the LCD of the remote controller. Follow the instructions written in the local setup procedure supplied with the remote controller, and select appropriate setting according to the installation environment.

Before connecting the power supply of the indoor unit, reconfirm following items:

- Cover for the electrical enclosure on the outdoor unit is in place.
- There is no wiring mistake.
- Piping air tight test and vacuuming have been performed firmly.
- All the necessary wiring work for outdoor unit has been finished.

After reconfirming the items listed above, connect the power supply of the indoor unit.

NOTES:

- Settings will not be changed if invalid numbers or setting values are selected.
- When optional wired remote controller is used, refer to the installation manual enclosed with the remote controller.

Entering function setting mode:

While pressing the POWERFUL button and TEMP. (△) button simultaneously, press the RESET button to enter the function setting mode.

Selecting the function number and setting value:

1. Press the TEMP. (△) (▽) buttons to select the function number. To switch between the left and right digits, press the 10 °C HEAT button.
2. Press the POWERFUL button to proceed to value setting. To return the function number selection, press the POWERFUL button again.
3. Press the TEMP. (△) (▽) buttons to select the setting value. To switch between the left and right digits, press the 10 °C HEAT button.
4. Press the MODE button once. Confirm that you hear the beep sound.
5. Press the START/STOP button to fix the function setting. Confirm that you hear the beep sound.
6. Press the RESET button to end the function setting mode.
7. After completing the function setting, be sure to disconnect the power supply and then reconnect it.

Function number
Setting value



⚠ CAUTION

After disconnecting the power supply, wait 30 seconds or more before reconnecting it. The function setting will not become active unless the power supply is disconnected and then reconnected.

NOTES:

- The air conditioner custom code is set to $\overline{H}$ prior to shipment.
- If you do not know the air conditioner custom code setting, try each of the custom codes ($\overline{H} \rightarrow \overline{b}$ $\rightarrow \overline{c} \rightarrow \overline{d}$) until you find the code that operates the air conditioner.

■ Contents of function setting

Each function setting listed in this section is adjustable in accordance with the installation environment.

NOTE: Setting will not be changed if invalid numbers or setting values are selected.

● Function setting list

	Function no.	Functions
1)	00	Remote controller address setting
2)	11	Filter sign
3)	30/31	Room temperature control for indoor unit sensor
4)	35/36	Room temperature control for wired remote controller sensor
5)	40	Auto restart
6)	42	Room temperature sensor switching
7)	44	Remote controller custom code
8)	46	External input control
9)	48	Room temperature sensor switching (Aux.)
10)	49	Indoor unit fan control for energy saving for cooling

1) Remote controller address setting

NOTE: Because this setting is normally done automatically when 2-wire-type wired remote controller is installed, setting is unnecessary.

Multiple indoor units can be operated by using one wired remote controller.

Set the unit number of each indoor unit.

Function number	Setting value	Setting description	Factory setting
00	00	Unit no. 0	◆
	01	Unit no. 1	
	02	Unit no. 2	
	03	Unit no. 3	
	04	Unit no. 4	
	05	Unit no. 5	
	06	Unit no. 6	
	07	Unit no. 7	
	08	Unit no. 8	
	09	Unit no. 9	
	10	Unit no. 10	
	11	Unit no. 11	
	12	Unit no. 12	
	13	Unit no. 13	
	14	Unit no. 14	
	15	Unit no. 15	

NOTE: When different type of indoor units (such as wall mounted type and cassette type, cassette type and duct type, or other combinations) are connected using group control system, some functions may no longer be available.

2) Filter sign

Select appropriate intervals for displaying the filter sign on the indoor unit according to the estimated amount of dust in the air of the room.

If the indication is not required, select "No indication" (03).

Function number	Setting value	Setting description	Factory setting
11	00	Standard (400 hours)	
	01	Long interval (1,000 hours)	
	02	Short interval (200 hours)	
	03	No indication	◆

3) Room temperature control for indoor unit sensor

Depending on the installed environment, correction of the room temperature sensor may be required. Select the appropriate control setting according to the installed environment.

The temperature of the room temperature sensor is corrected as follows:

Corrected temp. = Temp. of the room temp. sensor - Correction temp. value

Example of correction:

When the temperature of the room temp. sensor is 26°C and the setting value is "03" (-1.0°C), corrected temp. will be 27°C (26°C - [-1.0°C]).

The temperature correction values show the difference from the Standard setting "00" (manufacturer's recommended value).

Function number		Setting value	Setting description	Factory setting
30 (For cooling)	31 (For heating)	00	Standard setting	◆
		01	No correction 0.0 °C	
		02	-0.5 °C	More cooling Less heating
		03	-1.0 °C	
		04	-1.5 °C	
		05	-2.0 °C	
		06	-2.5 °C	
		07	-3.0 °C	
		08	-3.5 °C	
		09	-4.0 °C	
		10	+0.5 °C	Less cooling More heating
		11	+1.0 °C	
		12	+1.5 °C	
		13	+2.0 °C	
		14	+2.5 °C	
		15	+3.0 °C	
		16	+3.5 °C	
		17	+4.0 °C	

4) Room temperature control for wired remote controller sensor

Depending on the installed environment, correction of the wire remote temperature sensor may be required. Select the appropriate control setting according to the installed environment.

To change this setting, set Function 42 to Both "01".

Ensure that the Thermo Sensor icon is displayed on the remote controller screen.

Function number		Setting value	Setting description	Factory setting
35 (For cooling)	36 (For heating)	00	Standard setting	◆
		01	No correction 0.0°C	
		02	-0.5 °C	More cooling Less heating
		03	-1.0 °C	
		04	-1.5 °C	
		05	-2.0 °C	
		06	-2.5 °C	
		07	-3.0 °C	
		08	-3.5 °C	
		09	-4.0 °C	
		10	+0.5 °C	Less cooling More heating
		11	+1.0 °C	
		12	+1.5 °C	
		13	+2.0 °C	
		14	+2.5 °C	
		15	+3.0 °C	
		16	+3.5 °C	
		17	+4.0 °C	

5) Auto restart

Enables or disables automatic restart after a power interruption.

Function number	Setting value	Setting description	Factory setting
40	00	Enable	◆
	01	Disable	

NOTE: Auto restart is an emergency function such as for power outage etc. Do not attempt to use this function in normal operation. Be sure to operate the unit by remote controller or external device.

6) Room temperature sensor switching

(Only for wired remote controller)

When using the wired remote controller temperature sensor, change the setting to "Both" (01).

Function number	Setting value	Setting description	Factory setting
42	00	Indoor unit	◆
	01	Both	

00: Sensor on the indoor unit is active.

01: Sensors on both indoor unit and wired remote controller are active.

NOTE: Remote controller sensor must be turned on by using the remote controller.

7) Remote controller custom code

(Only for wireless remote controller)

The indoor unit custom code can be changed. Select the appropriate custom code.

Function number	Setting value	Setting description	Factory setting
44	00	A	◆
	01	B	
	02	C	
	03	D	

8) External input control

"Operation/Stop" mode or "Forced stop" mode can be selected.

Function number	Setting value	Setting description	Factory setting
46	00	Operation/Stop mode 1	◆
	01	(Setting prohibited)	
	02	Forced stop mode	
	03	Operation/Stop mode 2	

NOTE: If this function is necessary, the rotary switch on the External input and output PCB should be set to 1.

9) Room temperature sensor switching (Aux.)

To use the temperature sensor on the wired remote controller only, change the setting to "Wired remote controller" (01).

This function will only work if the function setting 42 is set at "Both" (01).

When the setting value is set to "Both" (00), more suitable control of the room temperature is possible by setting function setting 30 and 31 too.

Function number	Setting value	Setting description	Factory setting
48	00	Both	◆
	01	Wired remote controller	

10) Indoor unit fan control for energy saving for cooling

Enables or disables the power-saving function by controlling the indoor unit fan rotation when the outdoor unit is stopped during cooling operation.

Function number	Setting value	Setting description	Factory setting
49	00	Disable	
	01	Enable	
	02	Remote controller	◆

00: When the outdoor unit is stopped, the indoor unit fan operates continuously following the setting on the remote controller.

01: When the outdoor unit is stopped, the indoor unit fan operates intermittently at a very low speed.

02: Enable or disable this function by remote controller setting.

NOTES:

- As the factory setting, this setting is initially activated.
- Set to "00" or "01" when connecting a remote controller that cannot set the Fan control for energy saving function or connecting a network converter.
To confirm if the remote controller has this setting, refer to the operating manual of each remote controller.

11-2. Custom code setting for wireless remote controller

To interconnect the air conditioner and the wireless remote controller, assignment of the custom code for the wireless remote controller is required.

NOTE: Air conditioner cannot receive a signal if the air conditioner has not been set for the custom code.

When 2 or more air conditioners are installed in a room, and the remote controller is operating an air conditioner other than the one you wish to set, change the custom code of the remote controller to operate only the air conditioner you wish to set. (4 selections possible.)

Confirm the setting of the remote controller custom code and the function setting. If these do not match, the remote controller cannot be used to operate for the air conditioner.






1. Press the START/STOP button until only the clock is displayed on the remote controller display.
2. Press the MODE button for at least 5 seconds to display the current custom code. (Initially set to $\overline{A}$.)
3. Press the TEMP. ($\wedge$) ($\vee$) buttons to change the custom code between $\overline{A} \rightarrow \overline{B} \rightarrow \overline{C} \rightarrow \overline{D}$. Match the code on the display to the air conditioner custom code. (Initially set to $\overline{A}$.)
4. Press the MODE button again to return to the clock display. The custom code will be changed.



NOTES:




- If no button is pressed within 30 seconds after the custom code is displayed, the system returns to the original clock indicator. In this case, start again from step 1.
- The air conditioner custom code is set to $\overline{A}$ prior to shipment. To change the custom code, contact your retailer.
- If you do not know the assigned code for the air conditioner, try each of the custom code ($\overline{A} \rightarrow \overline{B} \rightarrow \overline{C} \rightarrow \overline{D}$) until you find the code which operates the air conditioner.

12. Accessories

Part name	Exterior	Q'ty	Part name	Exterior	Q'ty
Operating manual		1	Drain hose insulation		1
Installation manual		1	Cloth tape		1
Wall hook bracket		1	Tapping screw (large)		8
Remote controller		1	Tapping screw (small)		2
Battery		2	Air cleaning filters		1
Remote controller holder		1	Filter holder		2

13. Optional parts


13-1. Controllers

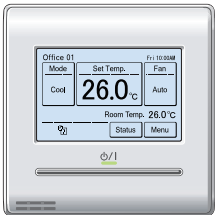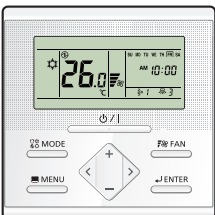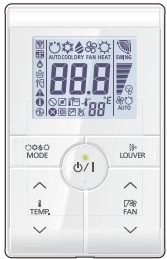Exterior	Part name	Model name	Summary
	Wired remote controller	UTY-RNRYZ*	Easy finger touch operation with LCD panel. Backlit LCD enables easy operation in a dark room. Wire type: Non-polar 2-wire Optional communication kit is necessary for installation.
	Wired remote controller	UTY-RLRY	High visibility and easy operation. Room temperature can be accurately controlled using the built-in thermo sensor. Wire type: Non-polar 2-wire Optional communication kit is necessary for installation.
	Simple remote controller	UTY-RSRY	Compact remote controller concentrates on the basic functions such as Start/Stop, fan control, temperature setting, and operation mode. Wire type: Non-polar 2-wire Optional communication kit is necessary for installation.
	Simple remote controller	UTY-RHRY	Compact remote controller concentrates on the basic functions such as Start/Stop, fan control, and temperature setting. Wire type: Non-polar 2-wire Optional communication kit is necessary for installation.

NOTES:

- Available functions may differ by the remote controller. For details, refer to the operation manual.
- When using a Wireless LAN adapter, group controlling system of the wired remote controller is prohibited.

13-2. Others

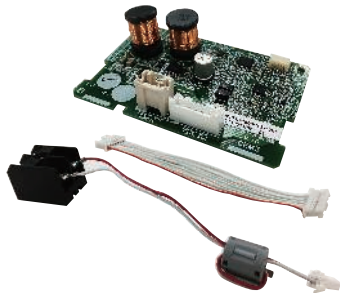Exterior	Part name	Model name	Summary
	External connect kit	UTY-XWZXZ5	Required when external device is connected.
	External input and output PCB	UTY-XCSXZ2	Use to connect with external devices and air conditioner PCB. Optional External connect kit is necessary for installation.
	Communication kit	UTY-TWRXZ2	Use to connect Non-polar 2-core wired remote controller.
	Wireless LAN adapter	UTY-TFSXF2	Remotely manage an air conditioning system using mobile devices such as smartphones and tablets.

Part 2. OUTDOOR UNIT

SINGLE TYPE:

AOYG30KMTA

AOYG36KMTA


1. Specifications

Type				Inverter heat pump	
Model name				AOYG30KMTA	AOYG36KMTA
Power supply				230 V ~ 50 Hz	
Power supply intake				Outdoor unit	
Available voltage range				198—264 V	
Starting current			A	10.2	13.9
Fan	Airflow rate	Cooling	m³/h	3,750	
		Heating		3,750	
	Type × Q'ty		Propeller × 1		
	Motor output		W	100	
Sound pressure level*1		Cooling	dB (A)	53	55
		Heating		55	55
Sound power level		Cooling	dB (A)	68	70
		Heating		69	70
Heat exchanger type		Dimensions (H × W × D)	mm	Main1: 756 × 905 × 18.19 Main2: 756 × 905 × 18.19	
		Fin pitch		1.45	
		Rows × Stages		1 × 36	
		Pipe type		Copper	
		Fin	Type (Material)	Aluminum	
			Surface treatment	Blue fin	
Compressor	Type × Q'ty		DC Twin rotary × 1		
	Motor output		W	1,500	
Refrigerant		Type (Global warming potential)		R32 (675)	
		Factory charge	g	1,900	
Refrigerant oil		Type		FW68D	
		Amount	cm³	600	
Enclosure		Material		Steel sheet	
		Color		Beige Approximate color of Munsell 10YR 7.5/1.0	
Dimensions (H × W × D)	Net	mm	788 × 940 × 320		
	Gross		966 × 1,027 × 445		
Weight	Net	kg	52		
	Gross		60		
Connection pipe	Size	Liquid	mm (in)	Ø9.52 (3/8)	
		Gas		Ø15.88 (5/8)	
	Method		Flare		
	Pre-charge length		m	30	
	Max. length			50	
	Max. height difference			30	
Operation range		Cooling	°C	-15 to 46	
		Heating		-15 to 24	
Drain hose		Material		LDPE	
		Size	mm	Ø13.0 (I. D.), Ø16.0 to Ø16.7 (O. D.)	
NOTES:					
- Specifications are based on the following conditions: - Cooling: Indoor temperature of 27 °CDB/19 °CWB, and outdoor temperature of 35 °CDB/24 °CWB. - Heating: Indoor temperature of 20 °CDB/15 °CWB, and outdoor temperature of 7 °CDB/6 °CWB. - Pipe length: 5.0 m, Height difference: 0 m. (Between outdoor unit and indoor unit.) - Protective function might work when using it outside the operation range. *1: Sound pressure level - Measured values in manufacturer's anechoic chamber. - Because of the surrounding sound environment, the sound levels measured in actual installation conditions might be higher than the specified values here. - This data is based on EN 14511 standard.					


2. Dimensions

2-1. Models: AOYG30KMTA and AOYG36KMTA

Unit: mm

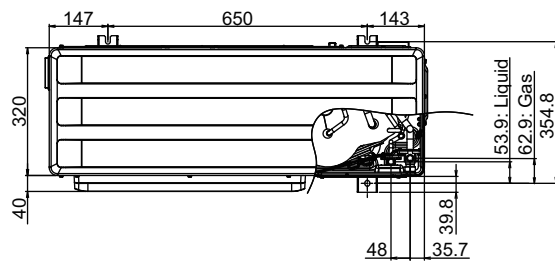


Top view

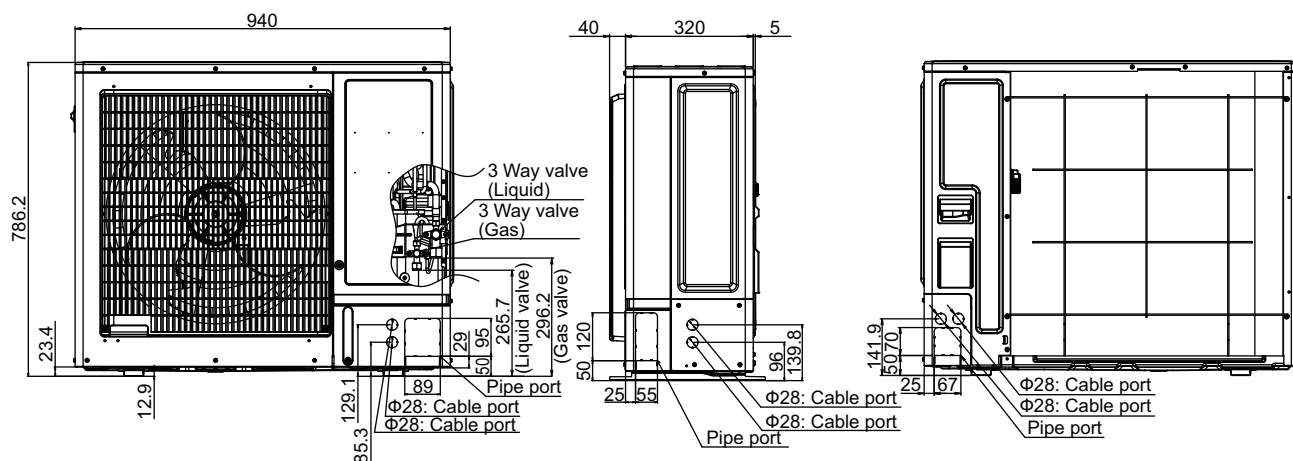

Front view

Side view

Rear view

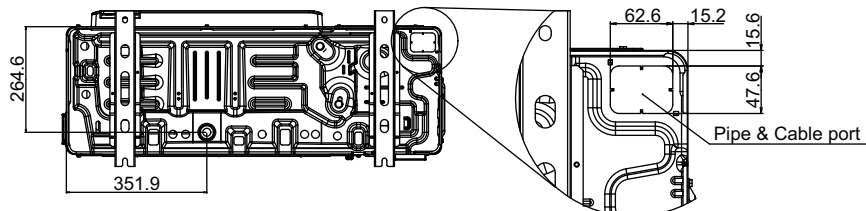

Bottom view

3. Installation space

3-1. Models: AOYG30KMTA and AOYG36KMTA

■ Space requirement


Provide sufficient installation space for product safety.

● Single outdoor unit installation


- When the upper space is open:

Unit: mm


When there are obstacles at the rear only.

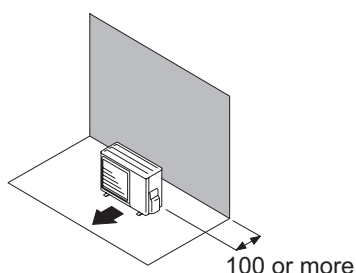


When there are obstacles at the rear and sides.

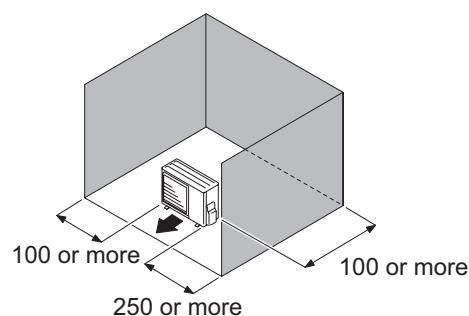

When there are obstacles at the front only.

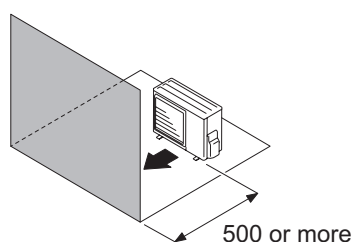


When there are obstacles at the front and rear.

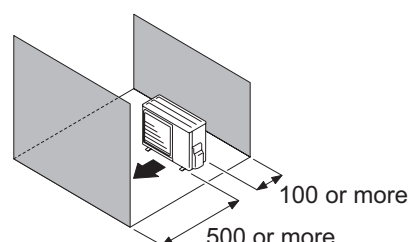


- When there is an obstruction in the upper space:

Unit: mm

When there are obstacles at the rear and above.

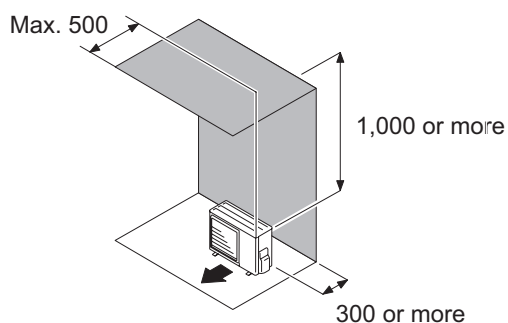

When there are obstacles at the rear, sides, and above.

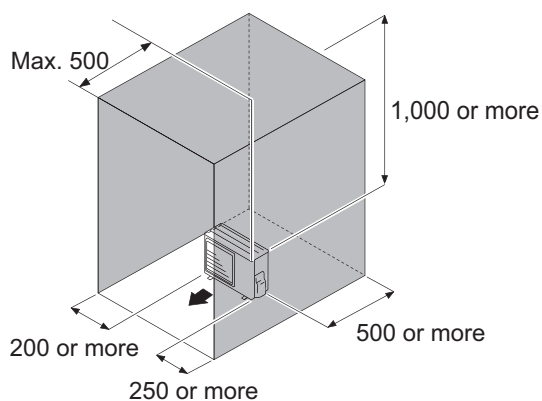


● Multiple outdoor unit installation


- When the upper space is open:

Unit: mm


When there are obstacles at the rear only.

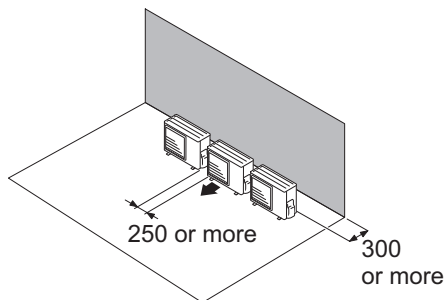

When there are obstacles at the front only.

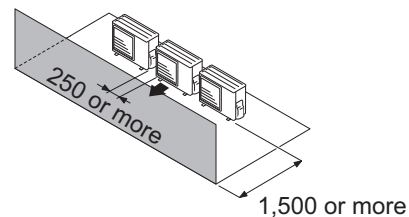


When there are obstacles at the front and rear.

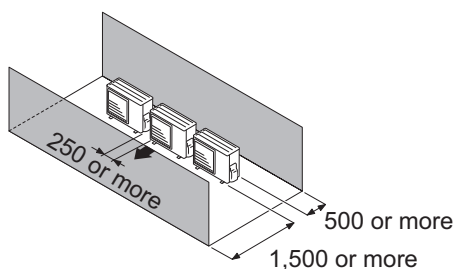

- When there is an obstruction in the upper space:

Unit: mm


When there are obstacles at the rear and above.

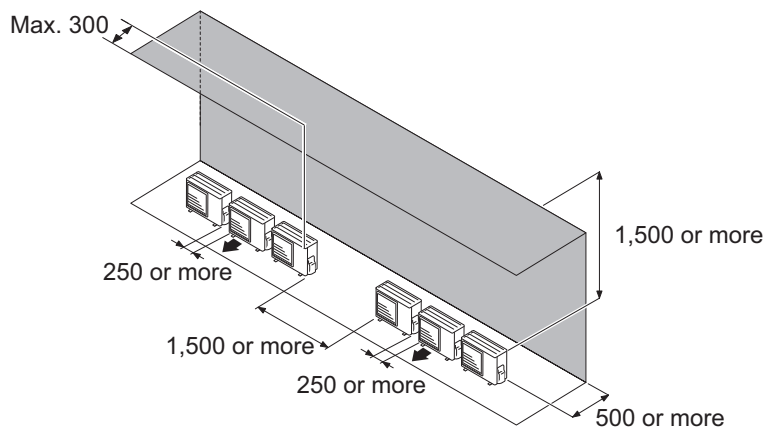



● Outdoor unit installation in multi-row

Unit: mm

Single parallel unit arrangement

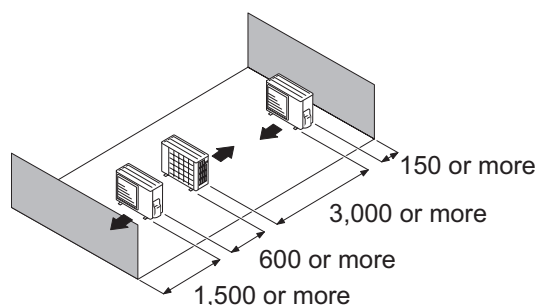

Multiple parallel unit arrangement

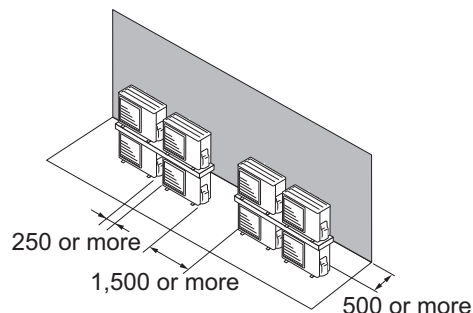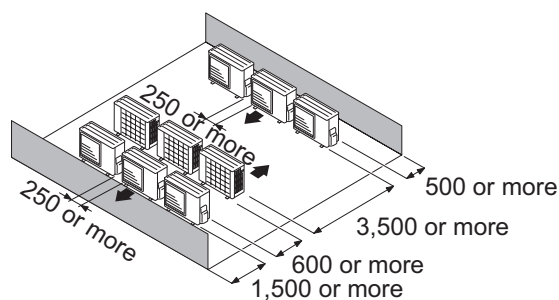


NOTES:

- If the space is larger than stated above, the condition will be the same as when there is no obstacle.
- Height above the floor level should be 50 mm or more.
- When installing the outdoor unit, be sure to open the front and left side to obtain better operation efficiency.


⚠ CAUTION

- Do not install the outdoor unit in two-stage where the drain water could freeze. Otherwise the drainage from the upper unit may form ice and cause a malfunction of the lower unit.
- When the outdoor temperature is 0 °C or less, do not use the accessory drain pipe and drain cap. If the drain pipe and drain cap are used, the drain water in the pipe may freeze in extremely cold climate. (For reverse cycle model only.)
- In area with heavy snowfall, if the inlet and outlet of the outdoor unit is blocked with snow, it might become difficult to get warm, and it is likely to cause product malfunction. Construct a canopy and a pedestal, or place the unit on a high stand that is locally installed.

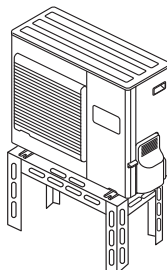

4. Refrigerant circuit

4-1. Models: AOYG30KMTA and AOYG36KMTA

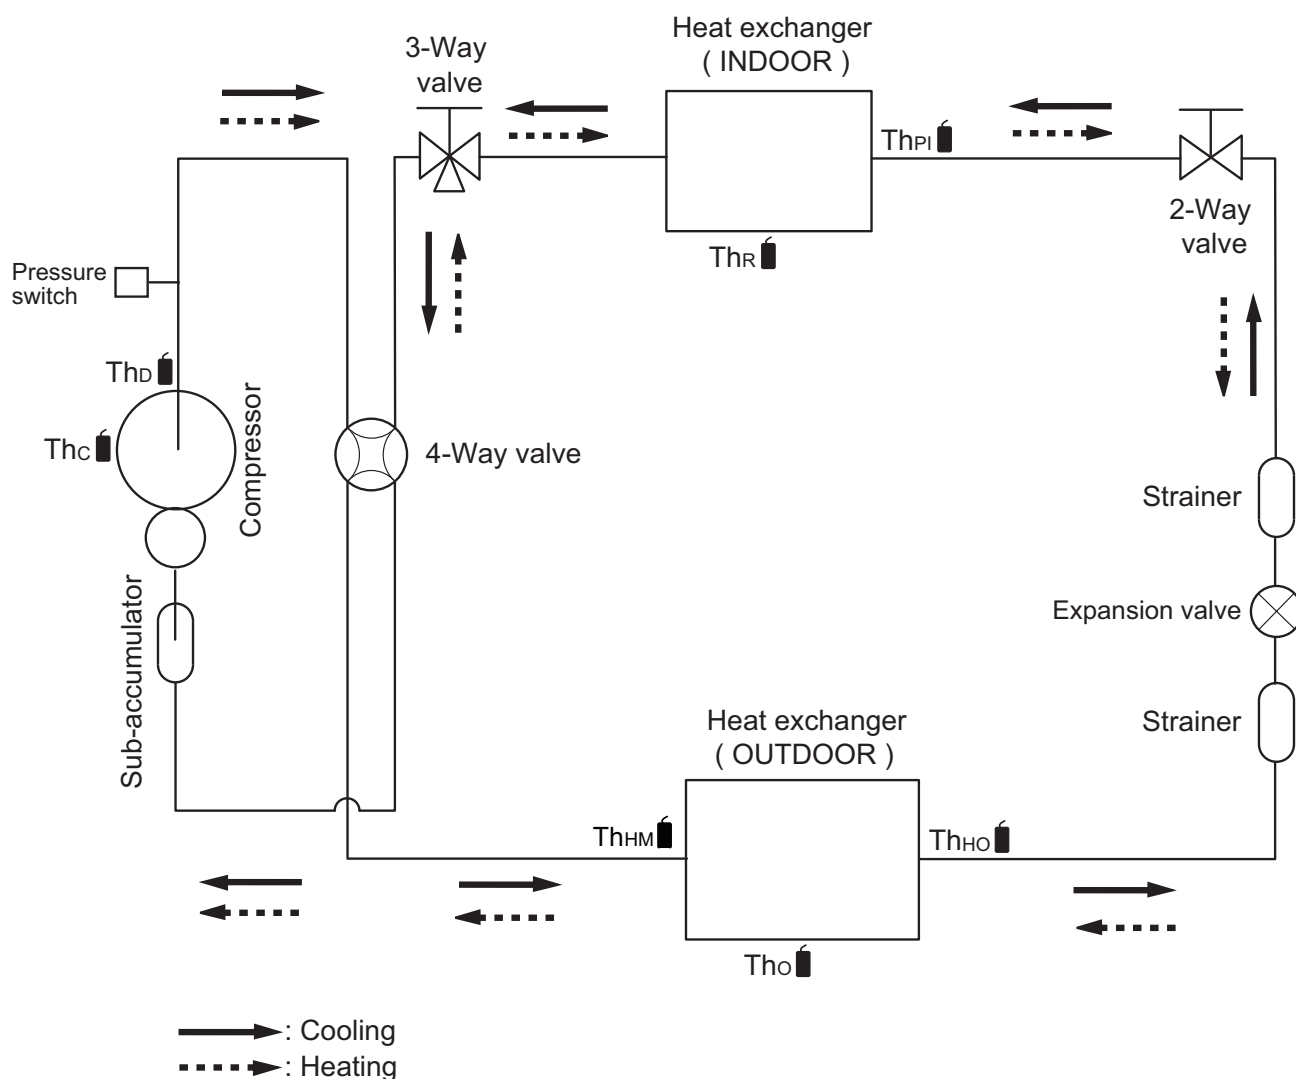

Th_c : Thermistor (Compressor temperature)

Th_D : Thermistor (Discharge temperature)

Th_{HM} : Thermistor (Heat Exchanger Med temperature)

Th_o : Thermistor (Outdoor temperature)


Th_{HO} : Thermistor (Heat Exchanger Out temperature)

Th_R : Thermistor (Room temperature)


Th_{PI} : Thermistor (Pipe temperature)

5. Wiring diagrams

5-1. Models: AOYG30KMTA and AOYG36KMTA

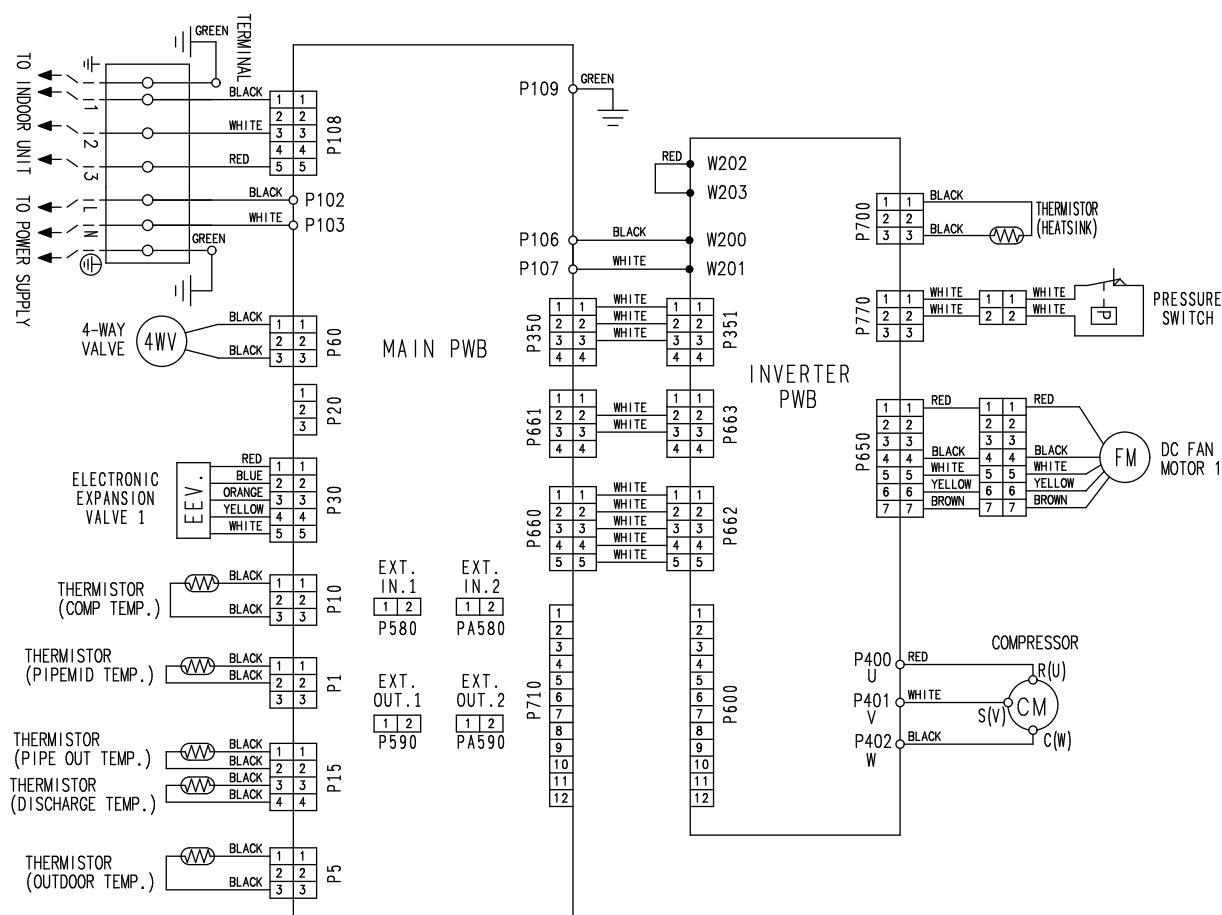

6. Capacity compensation rate for pipe length and height difference

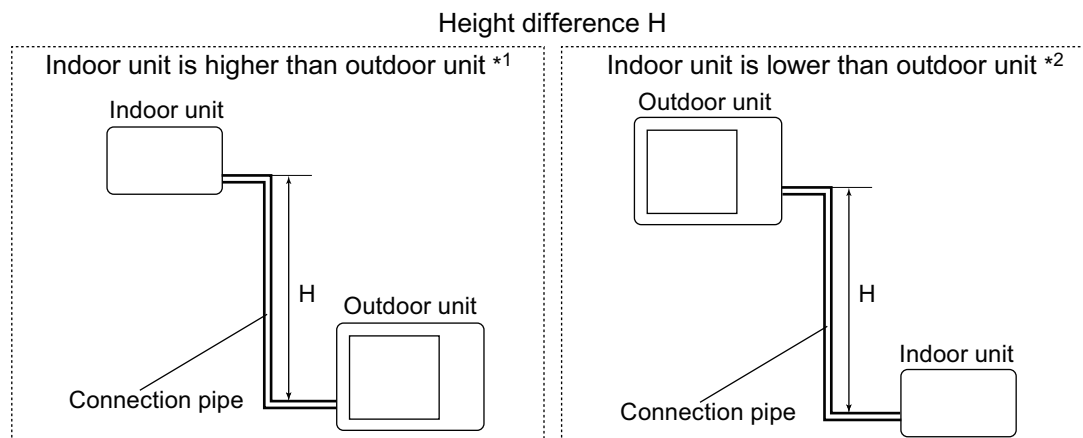

6-1. Model: AOYG30KMTA

NOTE: Values mentioned in the table are calculated based on the maximum capacity.

COOLING			Pipe length (m)						
			5	7.5	10	20	30	40	50
Height difference H (m)	Indoor unit is higher than outdoor unit *1	30	—	—	—	—	0.926	0.916	0.906
		20	—	—	—	0.953	0.942	0.931	0.920
		10	—	—	0.979	0.968	0.958	0.946	0.936
		7.5	—	0.988	0.983	0.972	0.961	0.951	0.939
		5	0.992	0.992	0.987	0.976	0.965	0.954	0.943
	Indoor unit is lower than outdoor unit *2	0	1.000	1.000	0.995	0.984	0.973	0.962	0.951
		-5	1.000	1.000	0.995	0.984	0.973	0.962	0.951
		-7.5	—	1.000	0.995	0.984	0.973	0.962	0.951
		-10	—	—	0.995	0.984	0.973	0.962	0.951
		-20	—	—	—	0.984	0.973	0.962	0.951
		-30	—	—	—	—	0.973	0.962	0.951

HEATING			Pipe length (m)						
			5	7.5	10	20	30	40	50
Height difference H (m)	Indoor unit is higher than outdoor unit *1	30	—	—	—	—	0.931	0.914	0.899
		20	—	—	—	0.954	0.931	0.914	0.899
		10	—	—	0.990	0.954	0.931	0.914	0.899
		7.5	—	1.000	0.990	0.954	0.931	0.914	0.899
		5	1.000	1.000	0.990	0.954	0.931	0.914	0.899
	Indoor unit is lower than outdoor unit *2	0	1.000	1.000	0.990	0.954	0.931	0.914	0.899
		-5	0.995	0.995	0.986	0.949	0.926	0.909	0.895
		-7.5	—	0.993	0.983	0.946	0.924	0.907	0.892
		-10	—	—	0.981	0.944	0.921	0.904	0.890
		-20	—	—	—	0.935	0.912	0.895	0.881
		-30	—	—	—	—	0.903	0.886	0.872

6-2. Model: AOYG36KMTA

NOTE: Values mentioned in the table are calculated based on the maximum capacity.

COOLING			Pipe length (m)						
			5	7.5	10	20	30	40	50
Height difference H (m)	Indoor unit is higher than outdoor unit *1	30	—	—	—	—	0.902	0.882	0.862
		20	—	—	—	0.938	0.917	0.897	0.876
		10	—	—	0.973	0.953	0.933	0.912	0.891
		7.5	—	0.988	0.977	0.957	0.936	0.916	0.895
		5	0.992	0.992	0.981	0.961	0.940	0.919	0.898
			0	1.000	1.000	0.989	0.968	0.947	0.926
	Indoor unit is lower than outdoor unit *2	-5	1.000	1.000	0.989	0.968	0.947	0.926	0.905
		-7.5	—	1.000	0.989	0.968	0.947	0.926	0.905
		-10	—	—	0.989	0.968	0.947	0.926	0.905
		-20	—	—	—	0.968	0.947	0.926	0.905
		-30	—	—	—	—	0.947	0.926	0.905

HEATING			Pipe length (m)						
			5	7.5	10	20	30	40	50
Height difference H (m)	Indoor unit is higher than outdoor unit *1	30	—	—	—	—	0.978	0.968	0.958
		20	—	—	—	0.988	0.978	0.968	0.958
		10	—	—	0.998	0.988	0.978	0.968	0.958
		7.5	—	1.000	0.998	0.988	0.978	0.968	0.958
		5	1.000	1.000	0.998	0.988	0.978	0.968	0.958
			0	1.000	1.000	0.998	0.988	0.978	0.958
	Indoor unit is lower than outdoor unit *2	-5	0.995	0.995	0.993	0.983	0.973	0.963	0.953
		-7.5	—	0.993	0.991	0.981	0.971	0.961	0.951
		-10	—	—	0.988	0.978	0.968	0.958	0.948
		-20	—	—	—	0.968	0.958	0.949	0.939
		-30	—	—	—	—	0.949	0.939	0.929

7. Additional charge calculation

7-1. Models: AOYG30KMTA and AOYG36KMTA

Refrigerant type		R32
Refrigerant amount	g	1,900

■ Refrigerant charge

Total pipe length	m	30 or less	40	50 (Max.)	40 g/m
Additional charge amount	g	0	400	800	

8. Airflow

8-1. Models: AOYG30KMTA and AOYG36KMTA

● Cooling

m ³ /h	3,750
l/s	1,042
CFM	2,207

● Heating


m ³ /h	3,750
l/s	1,042
CFM	2,207

9. Operation noise (sound pressure)


9-1. Noise level curve

Model: AOYG30KMTA

● Cooling

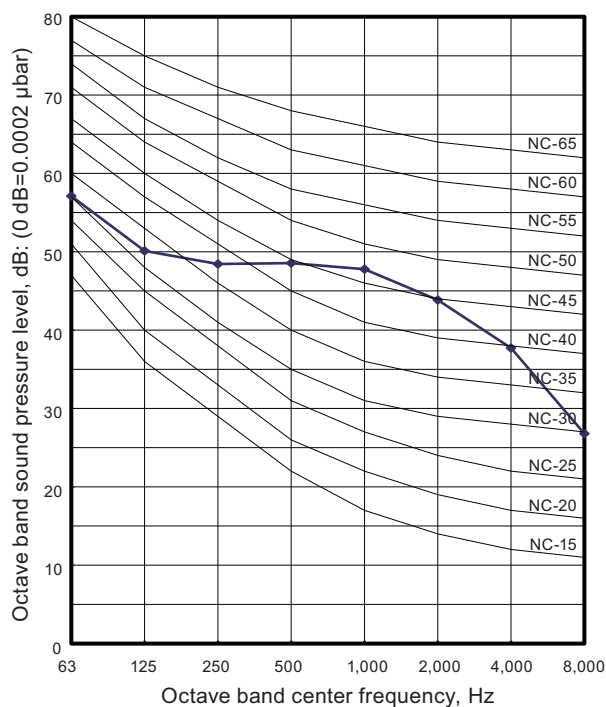


● Heating

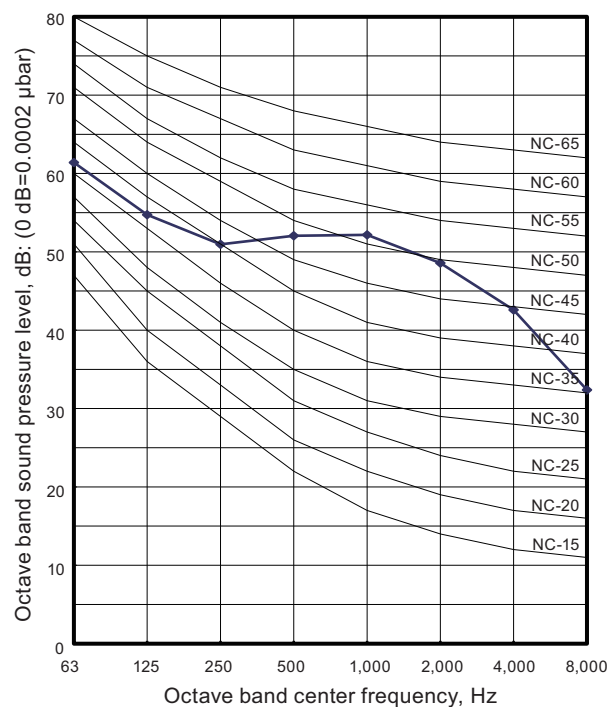


Model: AOYG36KMTA


● Cooling

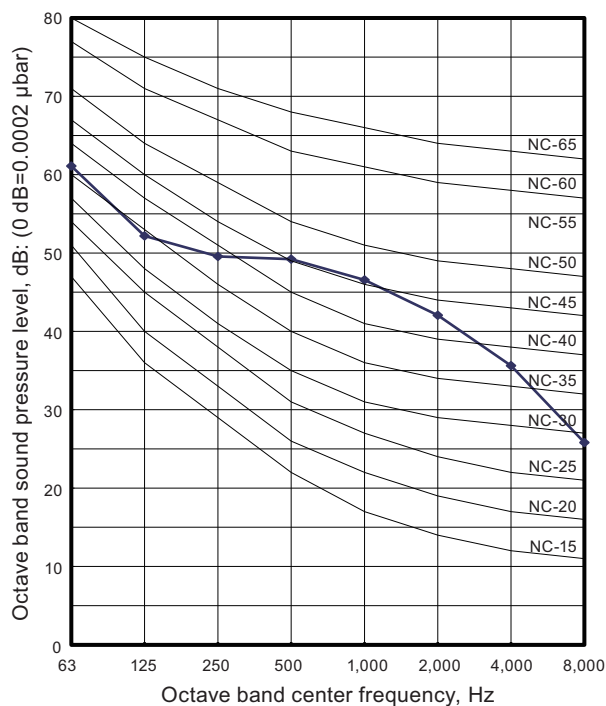

● Heating

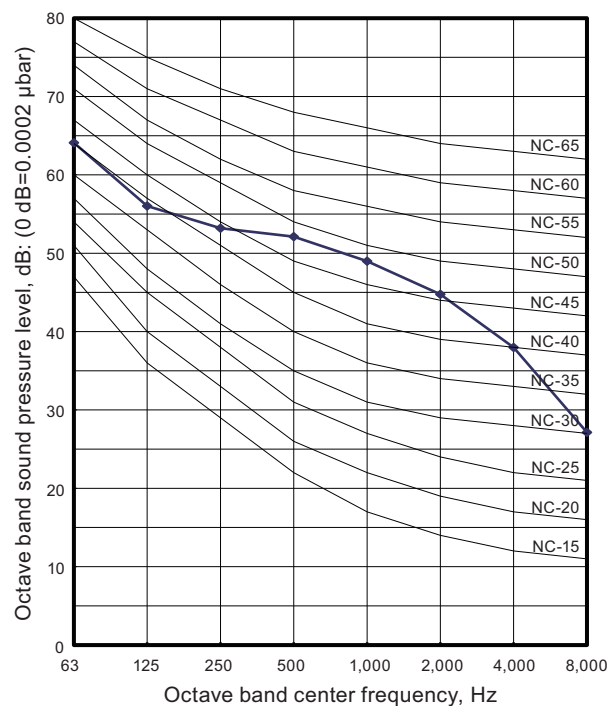

9-2. Sound level check point

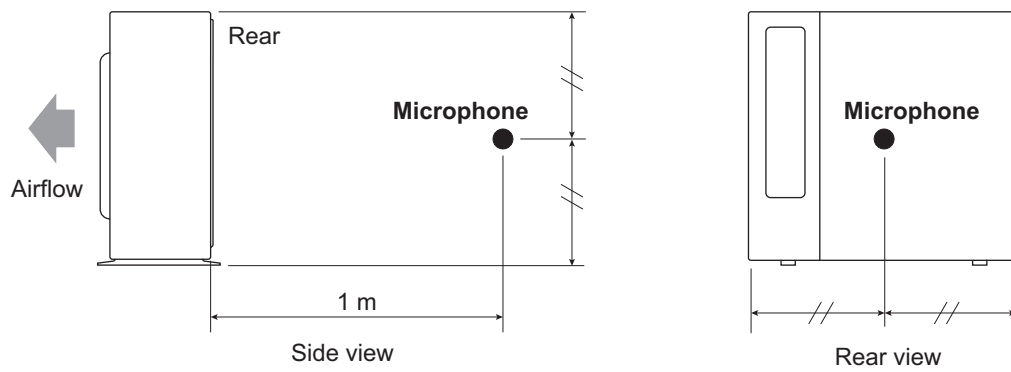

NOTE: Detailed shape of the actual outdoor unit might be slightly different from the one illustrated above.

10. Electrical characteristics

Model name			AOYG30KMTA	AOYG36KMTA
Power supply	Voltage	V	230 ~	
	Frequency	Hz	50	
Max operating current* ¹		A	21.0	21.5
Starting current		A	10.2	13.9
Wiring spec.* ²	Circuit breaker current		A	25
	Power cable		mm ²	4.0
	Connection cable* ³	Cross-sectional area	mm ²	1.5
		Limited wiring length	m	51

*1: Maximum current is the total current of the indoor unit and the outdoor unit.

*2: Selected sample based on Japan Electrotechnical Standards and Codes Committee E0005. As the regulations of wire size and circuit breaker differ in each country or region, select appropriate devices complied to the regional standard.

*3: Limit voltage drop to less than 2%. Increase conductor size if voltage drop is 2% or more.

11. Safety devices

Type of protection	Protection form		Model
			AOYG30KMTA AOYG36KMTA
Circuit protection	Current fuse (Main PCB)		250 V, 30 A 250 V, 3.15 A 250 V, 10 A × 2
Fan motor protection	Thermal protection program	Activate	122 ±9 °C Fan motor stop
		Reset	107—126 °C Fan motor restart
Compressor protection	Thermal protection program (Discharge temp.)	Activate	110 °C Compressor stop
		Reset	After 7 minutes Compressor restart
	Thermal protection program (Compressor temp.)	Activate	108 °C Compressor stop
		Reset	80 °C or less Compressor restart
	Thermal protection program (Outdoor temp.) (Only in COOL or DRY mode)	Activate	-20 °C Compressor stop
		Reset	-15 °C Compressor restart

12. External input and output

With using external input and output functions, this product can be operated inter-connectedly with an external device.

Connector	Input	Output	Remarks
P580	Low noise mode	—	See external input/output settings for details.
PA580	Peak cut mode	—	
P590	—	Error status	
PA590	—	Compressor status	

12-1. External input

With using external input function, on/off status of “Low noise mode” and “Peak cut mode” can be specified by the external signal.


■ Low noise mode

In following condition, the operating noise of the outdoor unit reduces comparing from the one in normal operating condition:


The air conditioner is set to the “Low noise mode” when closing the contact input of a commercial timer or on/off switch to a connector on the control PCB of the outdoor unit.

NOTE: Product performance may drop depending on some conditions such as the outdoor temperature.

• Circuit diagram example

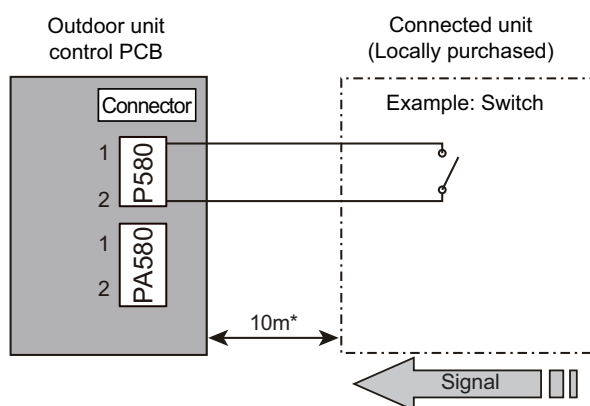

- Contact capacity: DC 24 V or more, 10 mA or more.
- *: Make the distance from the PCB to the connected unit within 10 m.
- Construct a circuit as shown in this figure with using optional parts mentioned below.
- Input signal: On in “Low noise mode”
- Input signal: Off in normal operation
- To set the level of “Low noise mode”, refer to ["Low noise mode"](#) on page 57.

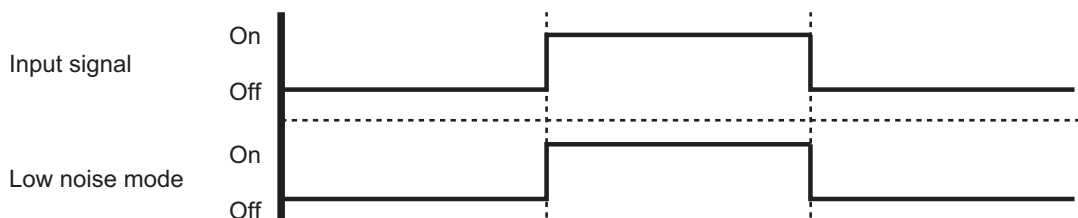


• Optional part

Part name	Model name	Exterior
External connect kit	UTY-XWZXZ3	External input wire


■ Peak cut mode

By performing following on-site work, operation that suppresses the current value can be enabled: The air conditioner is set to the “Peak cut mode” when closing the contact input of a commercial timer or on/off switch to a connector on the control PCB of the outdoor unit.

• Circuit diagram example

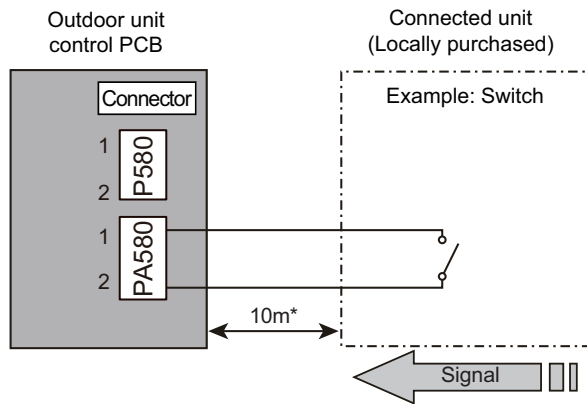

- Contact capacity: DC 24 V or more, 10 mA or more.
- *: Make the distance from the PCB to the connected unit within 10 m.
- Construct a circuit as shown in this figure with using optional parts mentioned below.
- Input signal: On in “Peak cut mode”
- Input signal: Off in normal operation
- To set the level of “Peak cut mode”, refer to **“Peak cut mode”** on page 58.

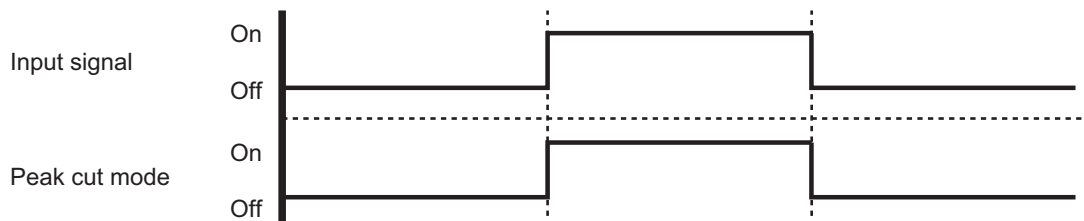

• Optional part

Part name	Model name	Exterior
External connect kit	UTY-XWZXZ3	External input wire


12-2. External output

With using external output function, some status signals are transmitted to the control PCB, and the related LED lamp indicates the status of this product.


■ Error status output

Signal on air conditioner error status is generated when a malfunction occurs.

• Circuit diagram example

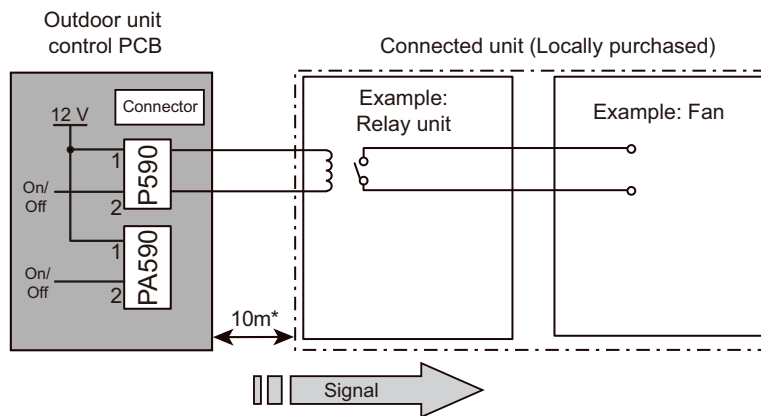

- Output voltage (Vcc): DC 12 V 50 mA or less
- *: Make the distance from the PCB to the connected unit within 10 m.

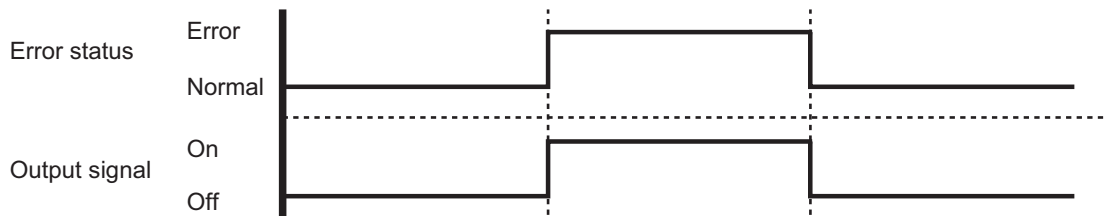


• Optional part

Part name	Model name	Exterior
External connect kit	UTY-XWZXZ3	External output wire


Compressor status output

Signal on compressor operation status is generated when the compressor is running.

• Circuit diagram example

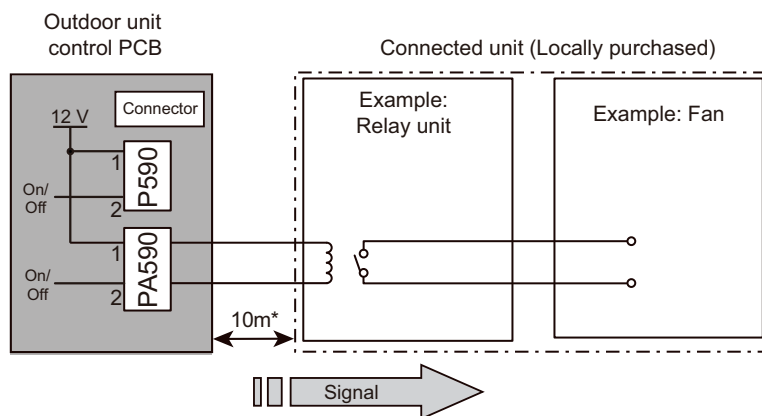


- Output voltage (Vcc): DC 12 V 50 mA or less
- *: Make the distance from the PCB to the connected unit within 10 m.

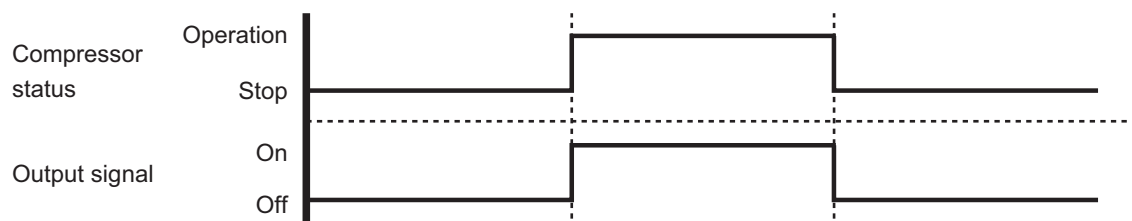

• Optional part

Part name	Model name	Exterior
External connect kit	UTY-XWZXZ3	External output wire



13. Function settings

Perform appropriate function setting locally according to the installation environment.


NOTE: Incorrect settings can cause a product malfunction.

⚠ CAUTION


- Before setting up the switch buttons, discharge the static electricity from your body.
- Never touch the terminals or the patterns on the parts that are mounted on the PCB.

13-1. Control PCB and switch buttons location

Control PCB of the outdoor unit is located as shown in the following figure.

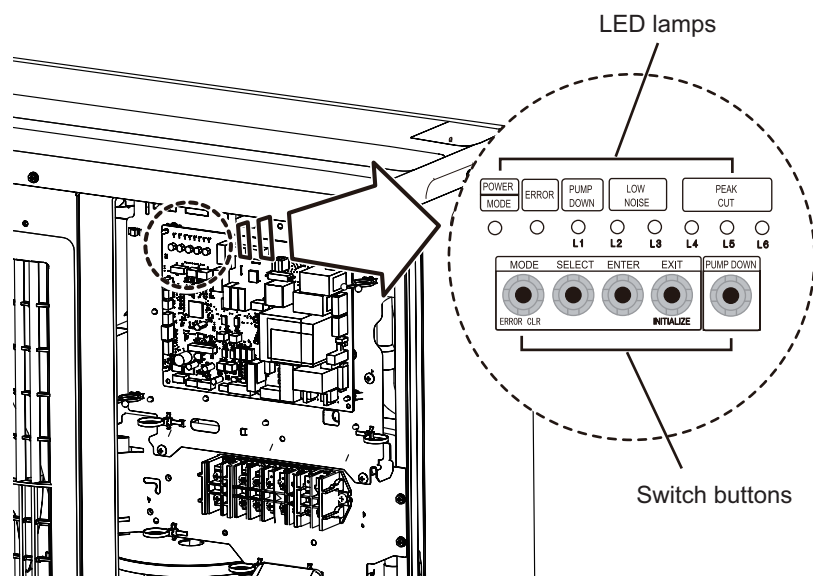

Switch buttons and the functions

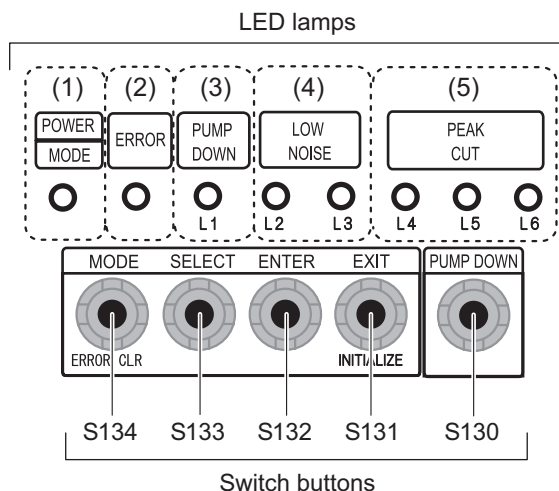

LED lamp			Function or operation method
(1)	POWER/MODE	Green	Lights on while power on. Local setting in outdoor unit or error code is displayed with blink.
(2)	ERROR	Red	Blinks during error operation.
(3)	PUMP DOWN (L1)	Orange	Lights on during pump down operation.
(4)	LOW NOISE MODE (L2 and L3)	Orange	Lights on during "Low noise mode" when local setting is activated. (Lighting pattern of L2 and L3 indicates low noise level.)
(5)	PEAK CUT MODE (L4, L5, and L6)	Orange	Lights on during "Peak cut mode" when local setting is activated. (Lighting pattern of L4, L5, and L6 indicates peak cut level.)

Switch button		Function or operation method
S134	MODE	Switches between "Local setting" and "Error code display".
S133	SELECT	Switches between the individual "Local settings" and the "Error code displays".
S132	ENTER	Switches between the individual "Local settings" and the "Error code displays".
S131	EXIT	Returns to "Operation status display".
S130	PUMP DOWN	Starts the pump down operation.

13-2. Local setting procedure

NOTE: Before performing the function setting, be sure to stop the operation of the air conditioner.

■ Low noise mode

1. Press the MODE switch button (S134) for 3 seconds or more to switch to "Local setting mode".
2. After confirming the LED lamp of POWER/MODE blinks 9 times, press the ENTER switch button (S132).

POWER MODE	ERROR	PUMP DOWN (L1)	LOW NOISE (L2) (L3)		PEAK CUT (L4) (L5) (L6)		
Blinks (9 times)	○	○	○	○	○	○	○

Sign "○": Lights off

3. Press the SELECT switch button (S133), and adjust the LED lamp as shown below. Then the LED lamp indicates the current setting.

LOW NOISE MODE	LOW NOISE (L2) (L3)	
	○	Blink

4. Press the ENTER switch button (S132).

LOW NOISE MOD E	LOW NOISE (L2) (L3)	
	○	●

Sign "●": Lights on

5. Press the SELECT switch button (S133), and adjust the LED lamps as shown below.

	PEAK CUT (L4) (L5) (L6)		
	○	○	Blink
MODE 1: Low	○	○	Blink
MODE 2: Lower	○	Blink	○

6. Press the ENTER switch button (S132) and fix it.

	PEAK CUT (L4) (L5) (L6)		
	○	○	●
MODE 1: Low	○	○	●
MODE 2: Lower	○	●	○

7. To return to "Operating status display (Normal operation)", press the EXIT switch button (S131).

In case of missing how many times you pressed the SELECT and ENTER switch buttons:

1. To return to "Operation status display (Normal operation)", press the EXIT switch button once.
2. Restart from the beginning of setting procedure.

NOTE: In case of missing how many times you pressed the SELECT and ENTER switch buttons, you must redo the setting procedure. Return to "Operation status display (Normal operation)" by pressing the EXIT switch button once, and restart from the beginning of the setting procedure.

■ Peak cut mode

1. Press the MODE switch button (S134) for 3 seconds or more to switch to "Local setting mode".
2. After confirming the LED lamp of POWER/MODE blinks 9 times, press the ENTER switch button (S132).

POWER MODE	ERROR	PUMP DOWN (L1)	LOW NOISE (L2) (L3)		PEAK CUT (L4) (L5) (L6)		
Blinks (9 times)	○	○	○	○	○	○	○

Sign "○": Lights off

3. Press the SELECT switch button (S133), and adjust the LED lamp as shown below. Then the LED lamp indicates the current setting.

PEAK CUT MODE	LOW NOISE	
	(L2)	(L3)
	Blink	○

4. Press the ENTER switch button (S132).

PEAK CUT MODE	LOW NOISE	
	(L2)	(L3)
	●	○

Sign "●": Lights on

5. Press the SELECT switch button (S133), and adjust the LED lamps as shown below.

	PEAK CUT		
	(L4)	(L5)	(L6)
0 % of rated input ratio	○	○	Blink
50 % of rated input ratio	○	Blink	○
75 % of rated input ratio	○	Blink	Blink
100 % of rated input ratio	Blink	○	○

6. Press the ENTER switch button (S132) and fix it.

	PEAK CUT		
	(L4)	(L5)	(L6)
0 % of rated input ratio	○	○	●
50 % of rated input ratio	○	●	○
75 % of rated input ratio	○	●	●
100 % of rated input ratio	●	○	○

7. To return to "Operating status display (Normal operation)", press the EXIT switch button (S131).


NOTE: When pressed number is lost during setting, you must redo the setting procedure. Return to "Operation status display (Normal operation)" by pressing the EXIT switch button once, and restart from the beginning of the setting procedure.

14. Accessories

14-1. Models: AOYG30KMTA and AOYG36KMTA

Part name	Exterior	Q'ty	Part name	Exterior	Q'ty
Installation manual		1	Drain cap		3
Drain pipe		1	One-touch bush		2

15. Optional parts

Exterior	Part name	Model name	Summary
	External connect kit	UTY-XWZXZ3	Use to operate the external input and output functions of outdoor unit.